


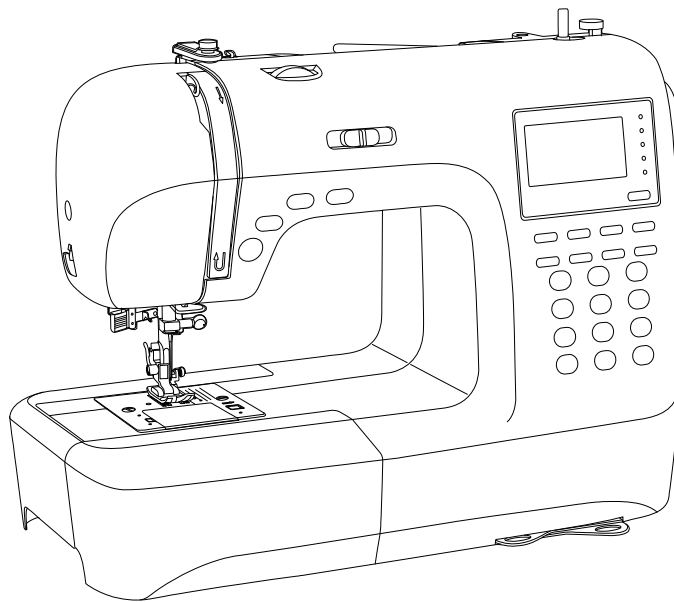


2010



Liste de pièces
Lista de Piezas
Parts List


® A registered trademark of The Singer Company Ltd. or its affiliates.
® *Una marca registrada de The Singer Company Ltd. o sus afiliados.*
® *Une marca déposée de The Singer Company Ltd. ou ses filiales.*

A

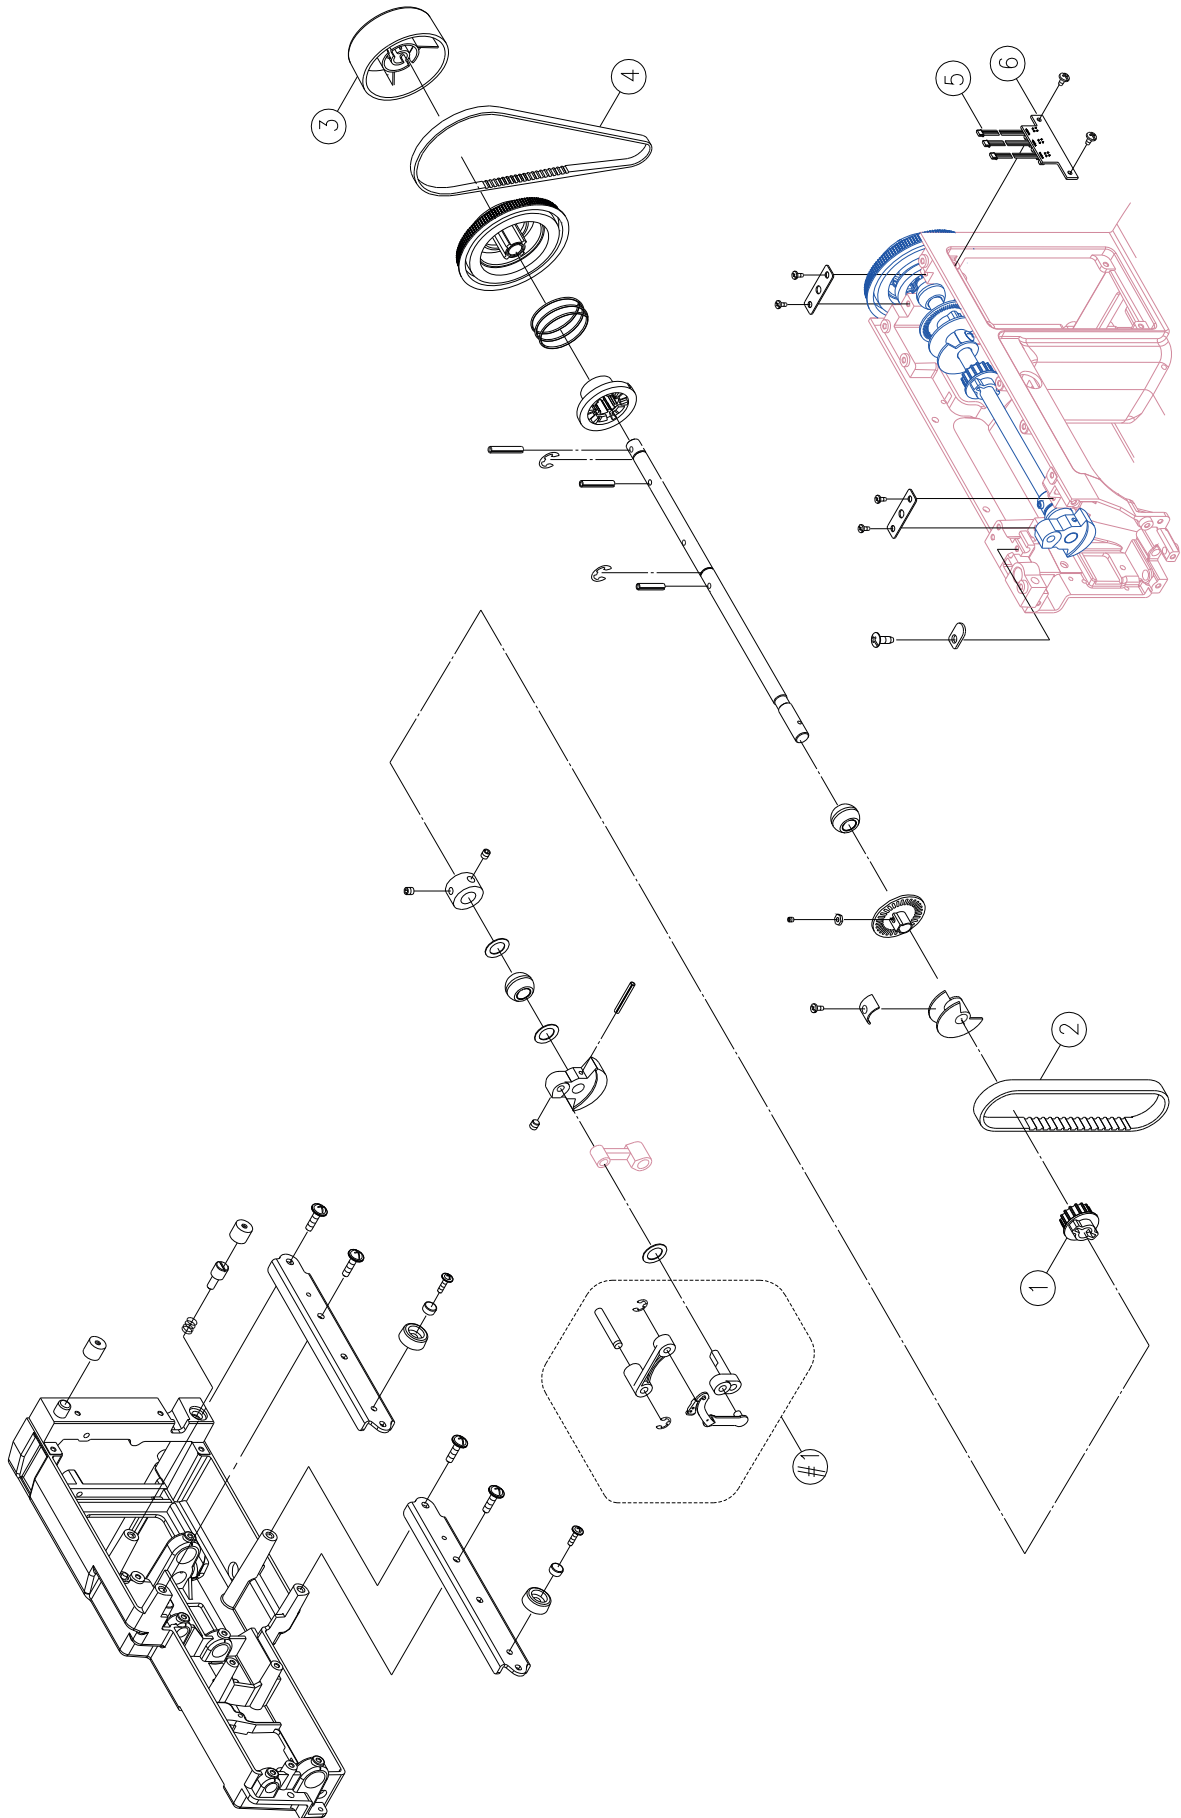


<u>Pos</u>	<u>Part No.</u>	<u>Description</u>
1	270 H1A0403000	Arm shaft sprocket
2	270 00742505M6	Motor drive belt
3	270 H1A1403209	Hand wheel
4	270 00749402M5	Motor drive belt (2M)
5	270 008H1A0004	Photo sensor thread
6	270 008H1A0003	Photo sensor plate
#1	416484501	Thread take up lever complete

B

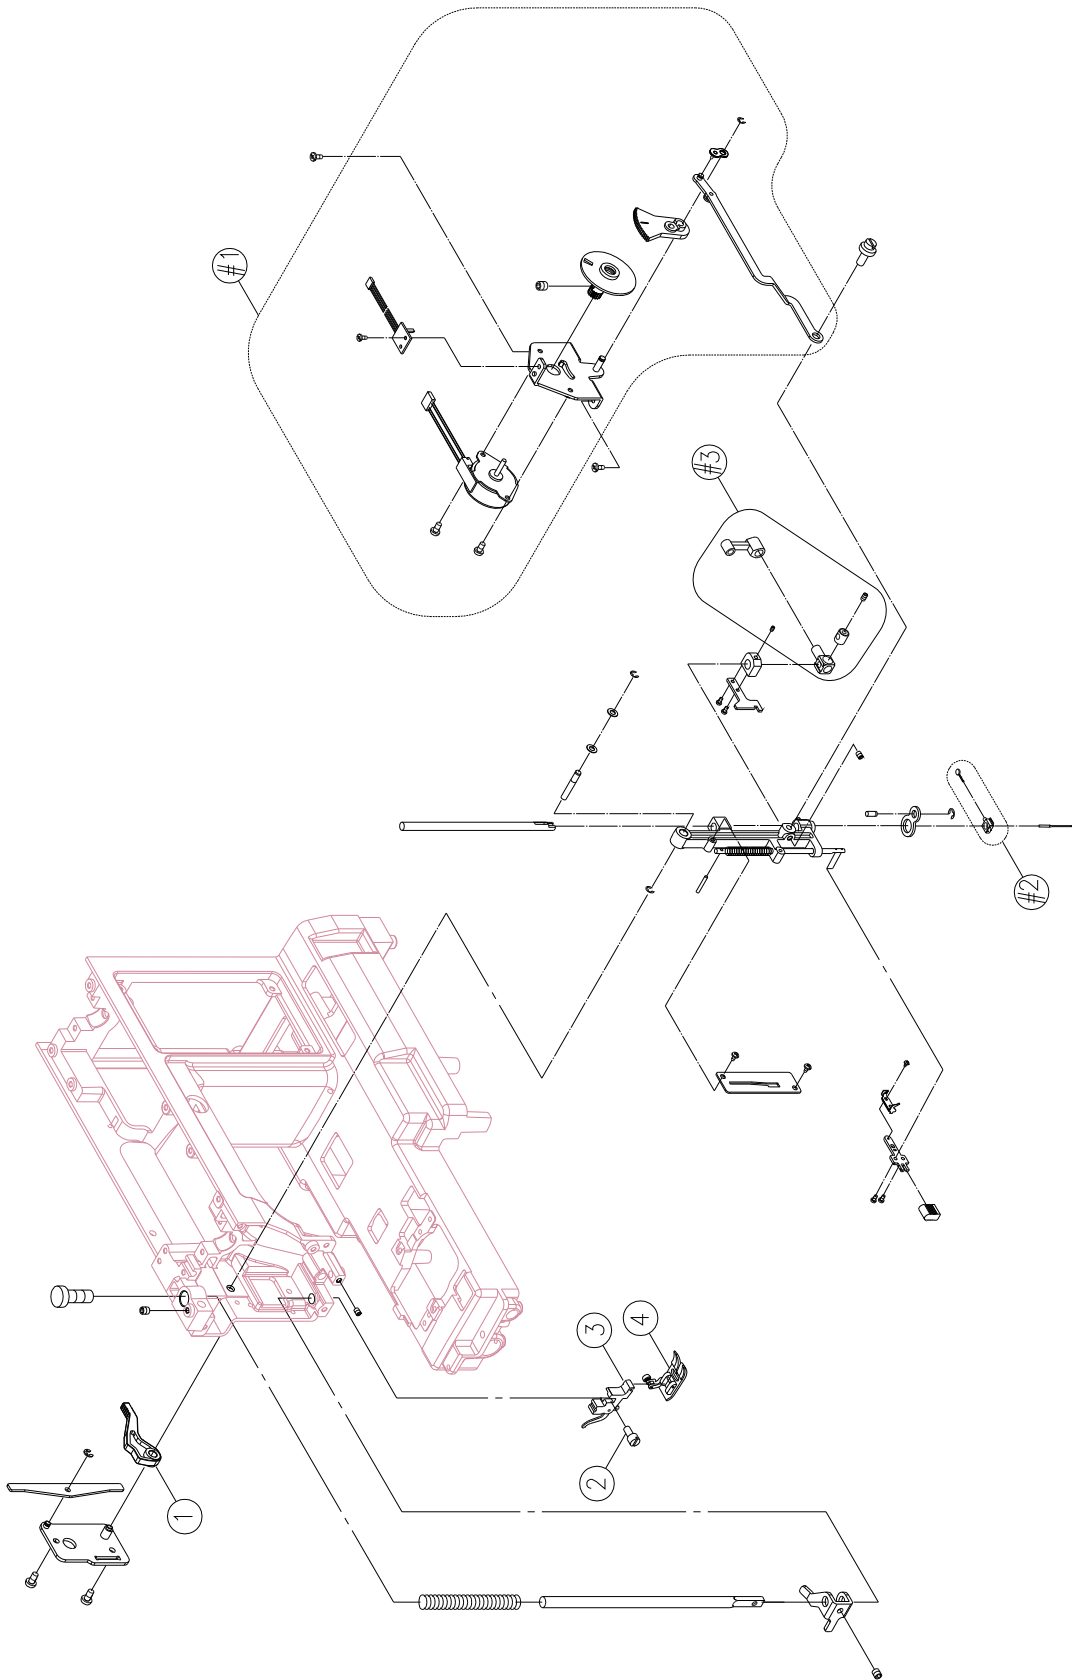


<u>Pos</u>	<u>Part No.</u>	<u>Description</u>
1	270 K6B0563209	Presser bar lifter lever
2	416184201	Set screw (9/64×40×7.5)
3	416128201	Shank complete
4	270 006186008	Zigzag presser foot
#1	270 H1A0154000	Zigzag pulse motor plate complete
#2	416245301	Needle clamp complete
#3	416235801	Needle bar crank rod complete

C

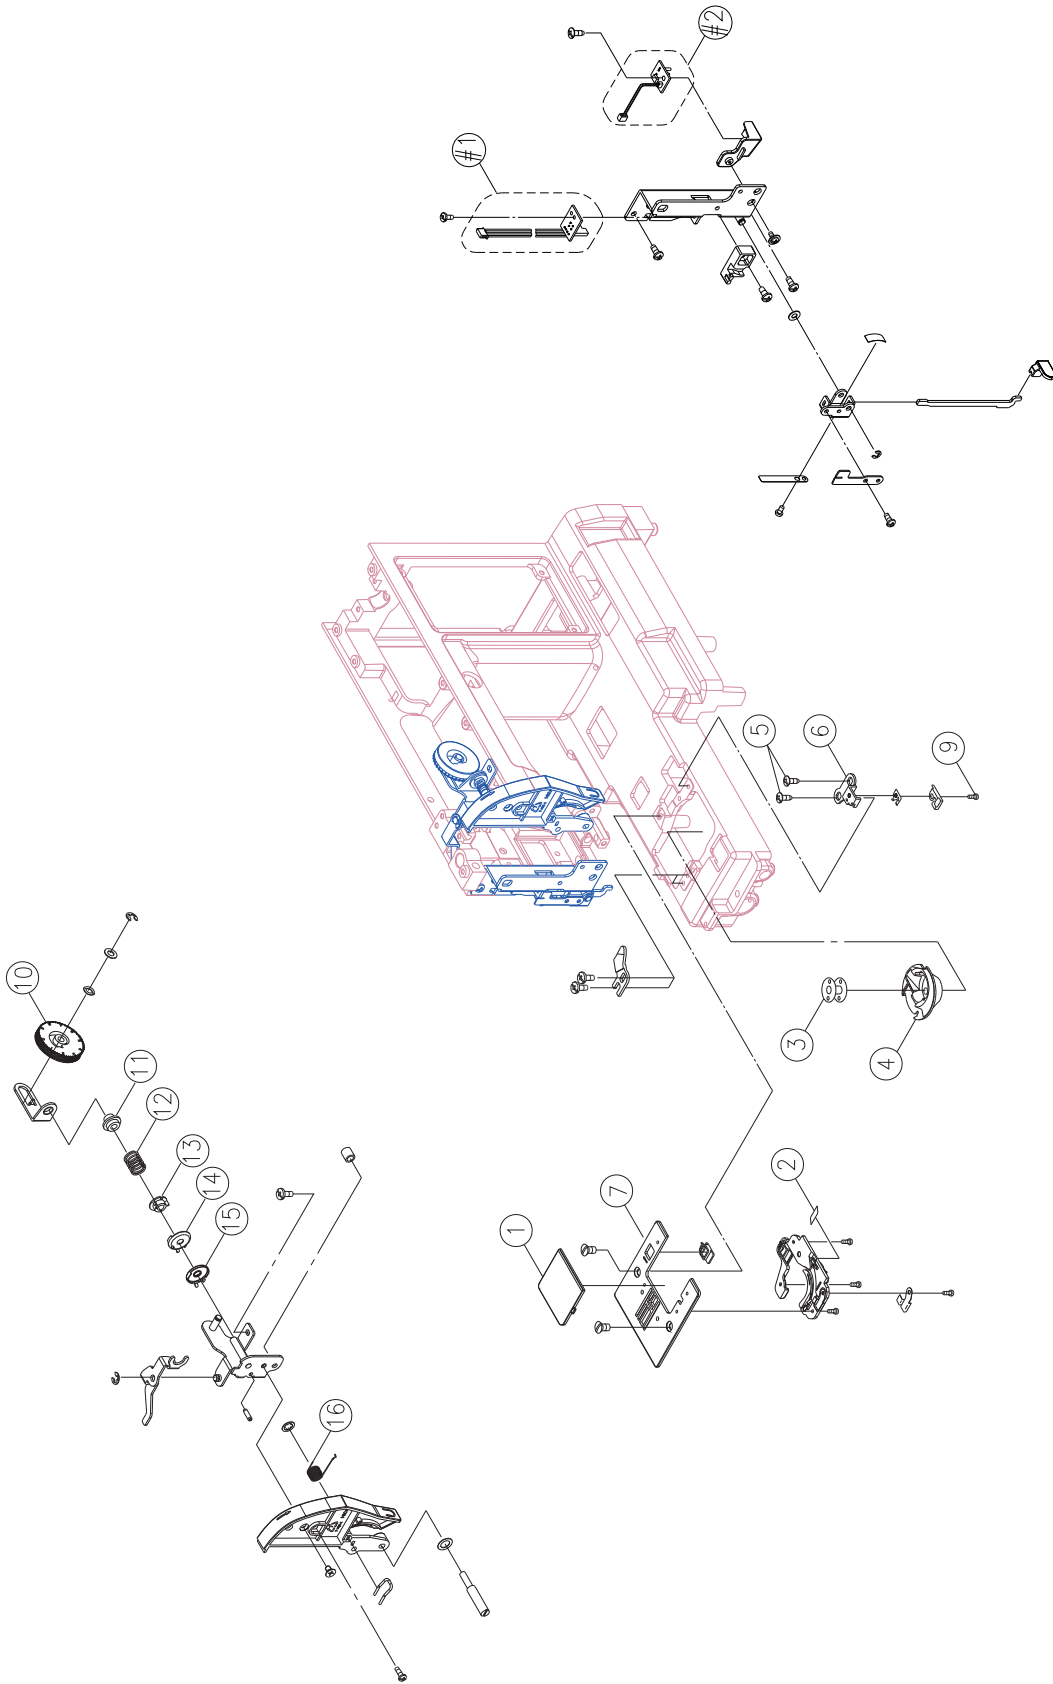


Pos	Part No.	Description
1	416565401	Needle plate cover
2	416172501	Thread cutter
3	68000175	Bobbin
4	416827001	Shuttle hook complete
5	416121201	Set screw (M4×6 B)
6	416143901	Rotary hook plate
7	270 H2A0033004	Needle plate
9	416119001	Set screw (M2×2.5)
10	270 K5BD013209	Dial tension knob
11	416153801	Dial tension regulator
12	416155901	Dial tension spring
13	270 V60303000	Thread guide spring
14	416153601	Dial tension disc (1)
15	416146301	Dial tension disc
16	416412001	Dial tension spring regulator
#1	270 008H5A0005	Photo sensor complete (for H50A)
#2	270 008H1A0017	LED light lamp complete

D

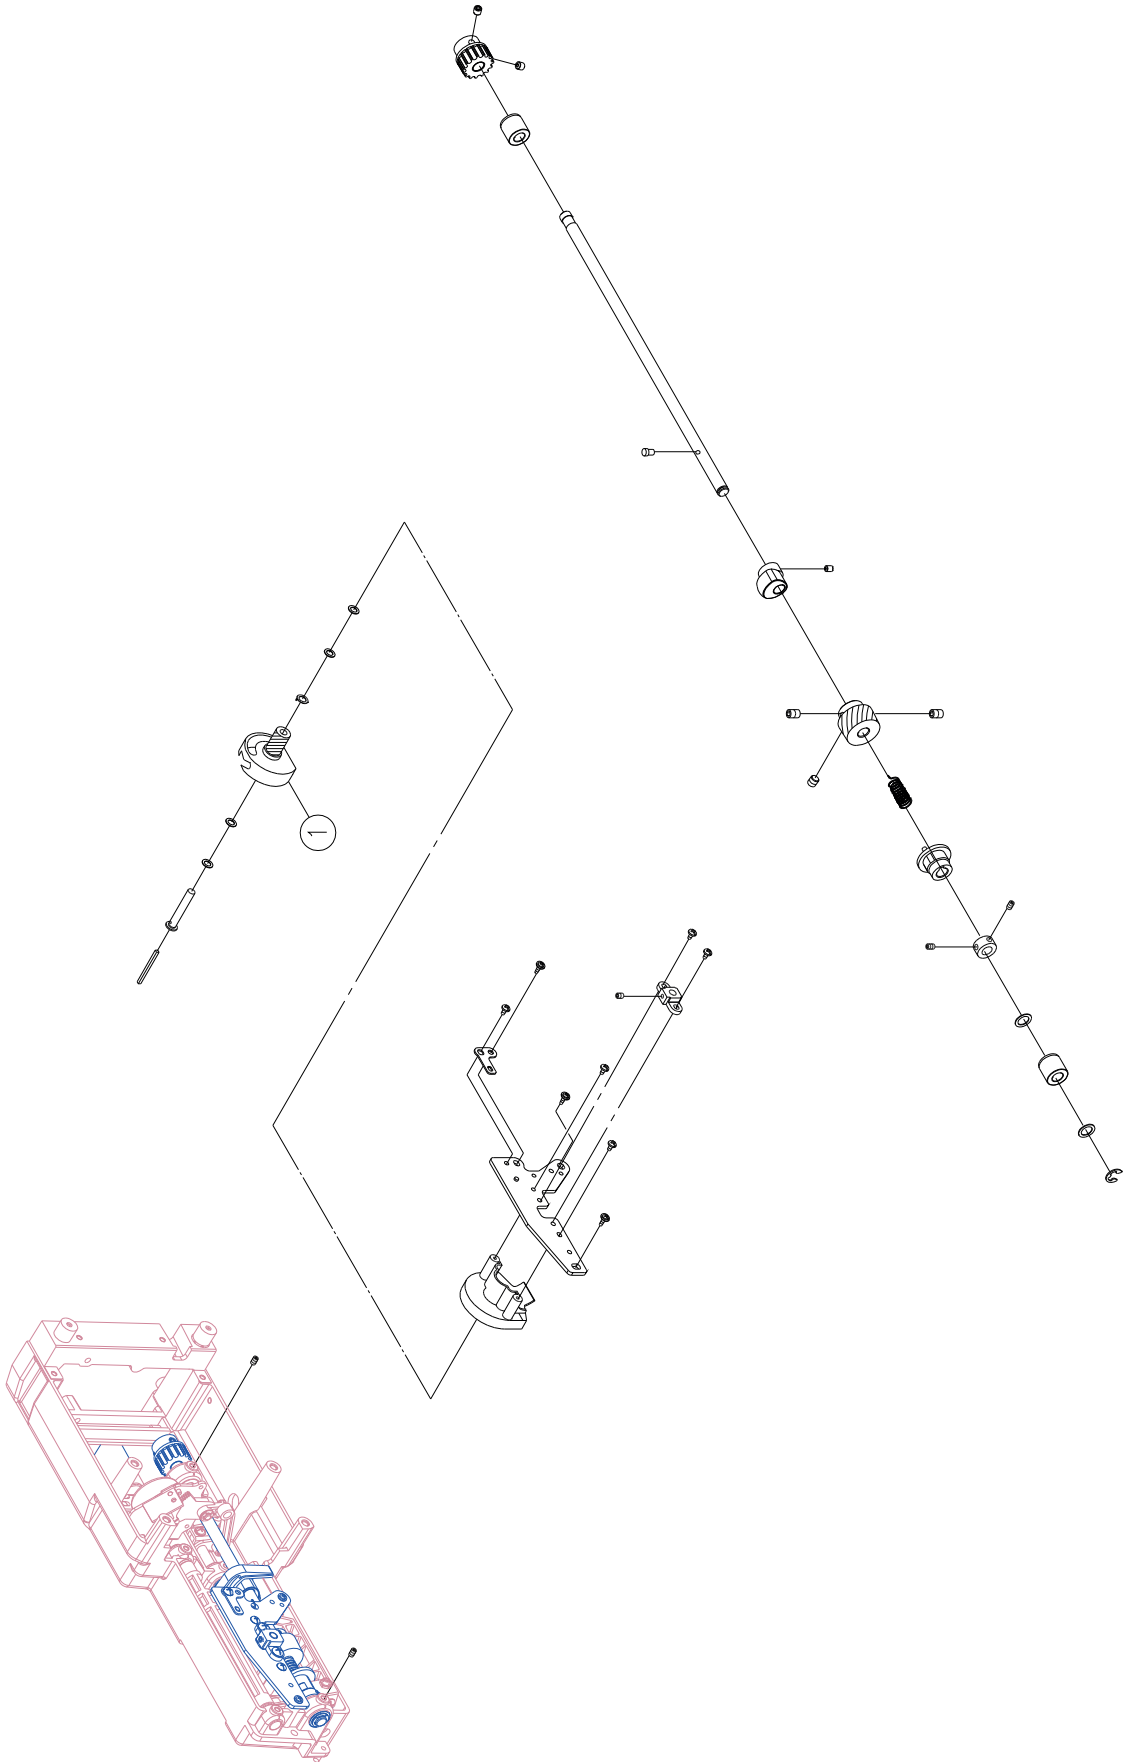


<u>Pos</u>	<u>Part No.</u>	<u>Description</u>
1	416479801	Shuttle hook holder

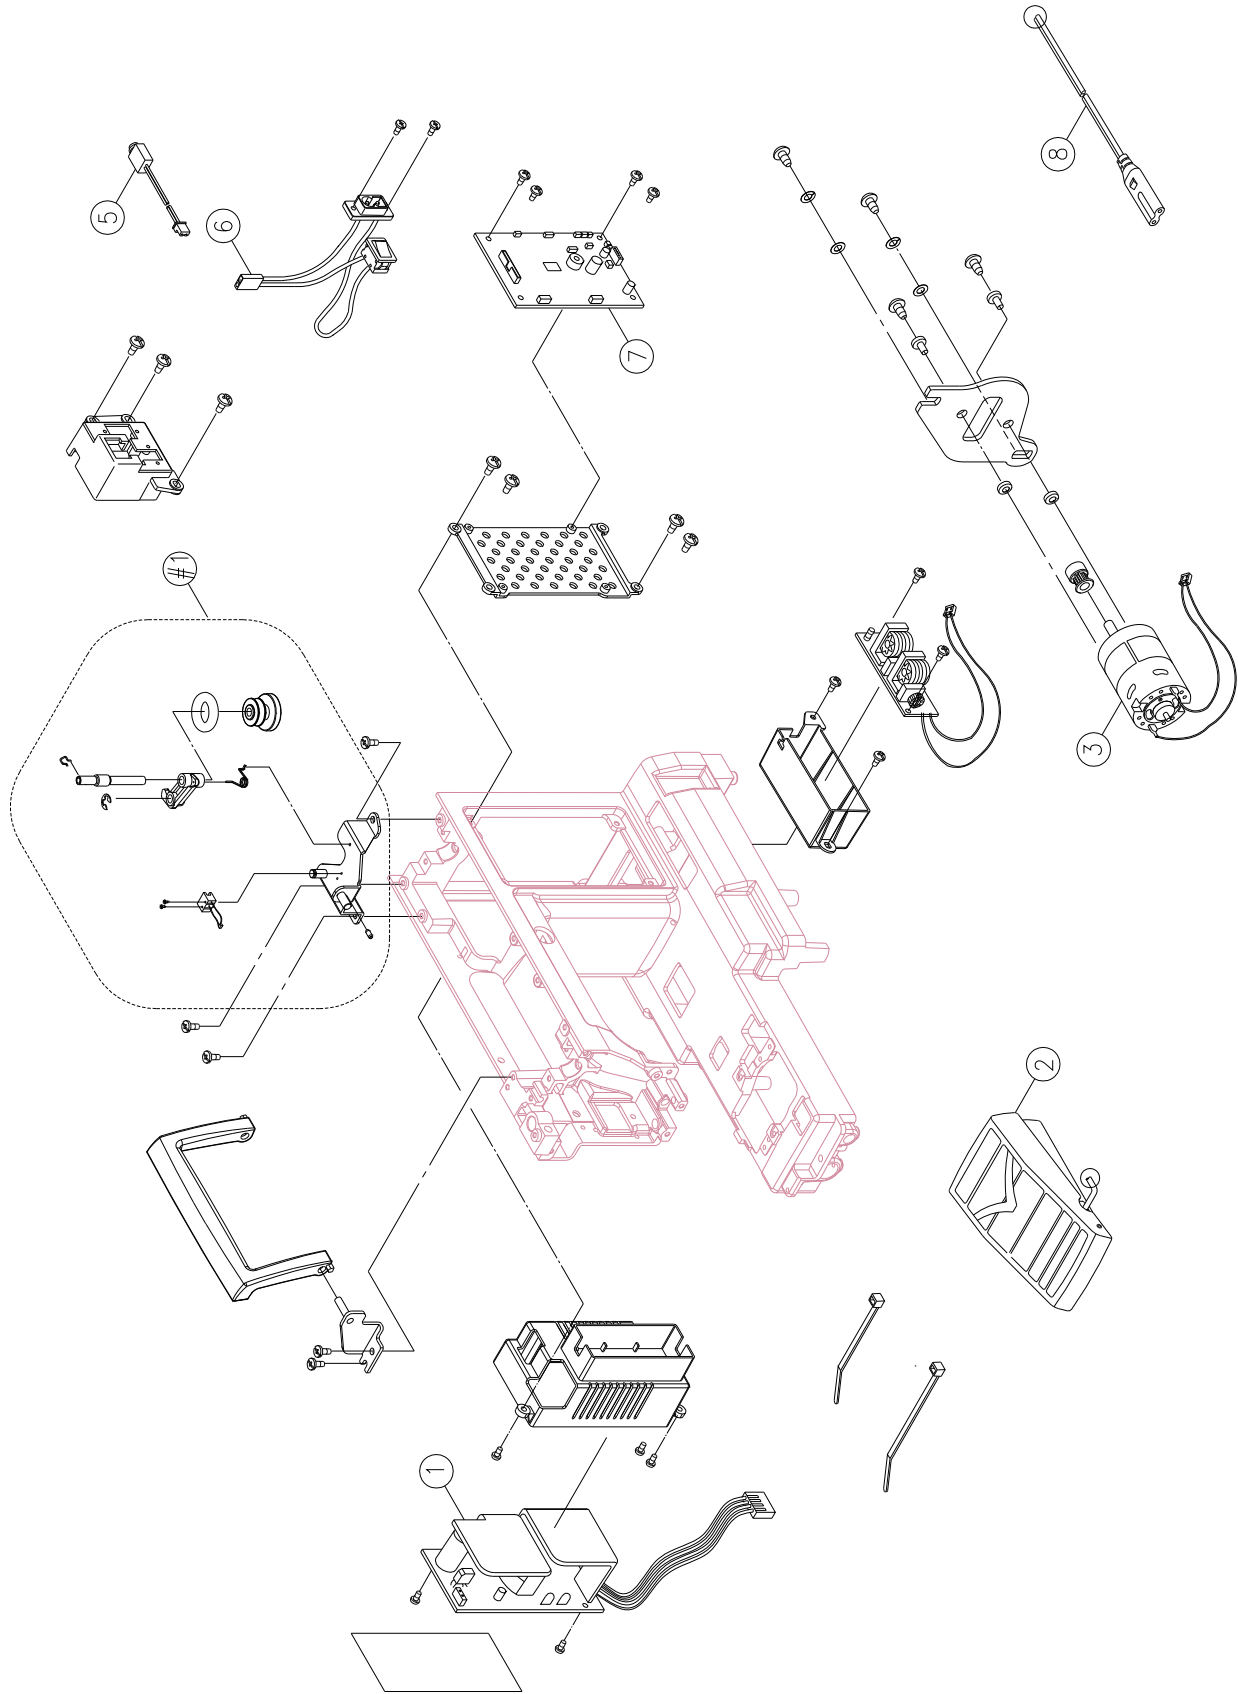

Pos	Part No.	Description
1		HF transformer complete (for 230V) EU.
	270 008H1A0031	HF transformer complete (for 120V) UL
2	416113701	Foot controller (C-9000)
3	416417101	Main motor
5	416420201	Controller receptacle
6	270 008H1A0028	Switch receptacle ass'y
7	270 008H5A0001	Main circuit board (H50A)
8	412158101	Power cord (for 240V) AU
	412157903	Power cord (for 120V) US
	412157801	Power cord (for 230V) EU
#1	270 H1A0564000	Bobbin winder complete


F

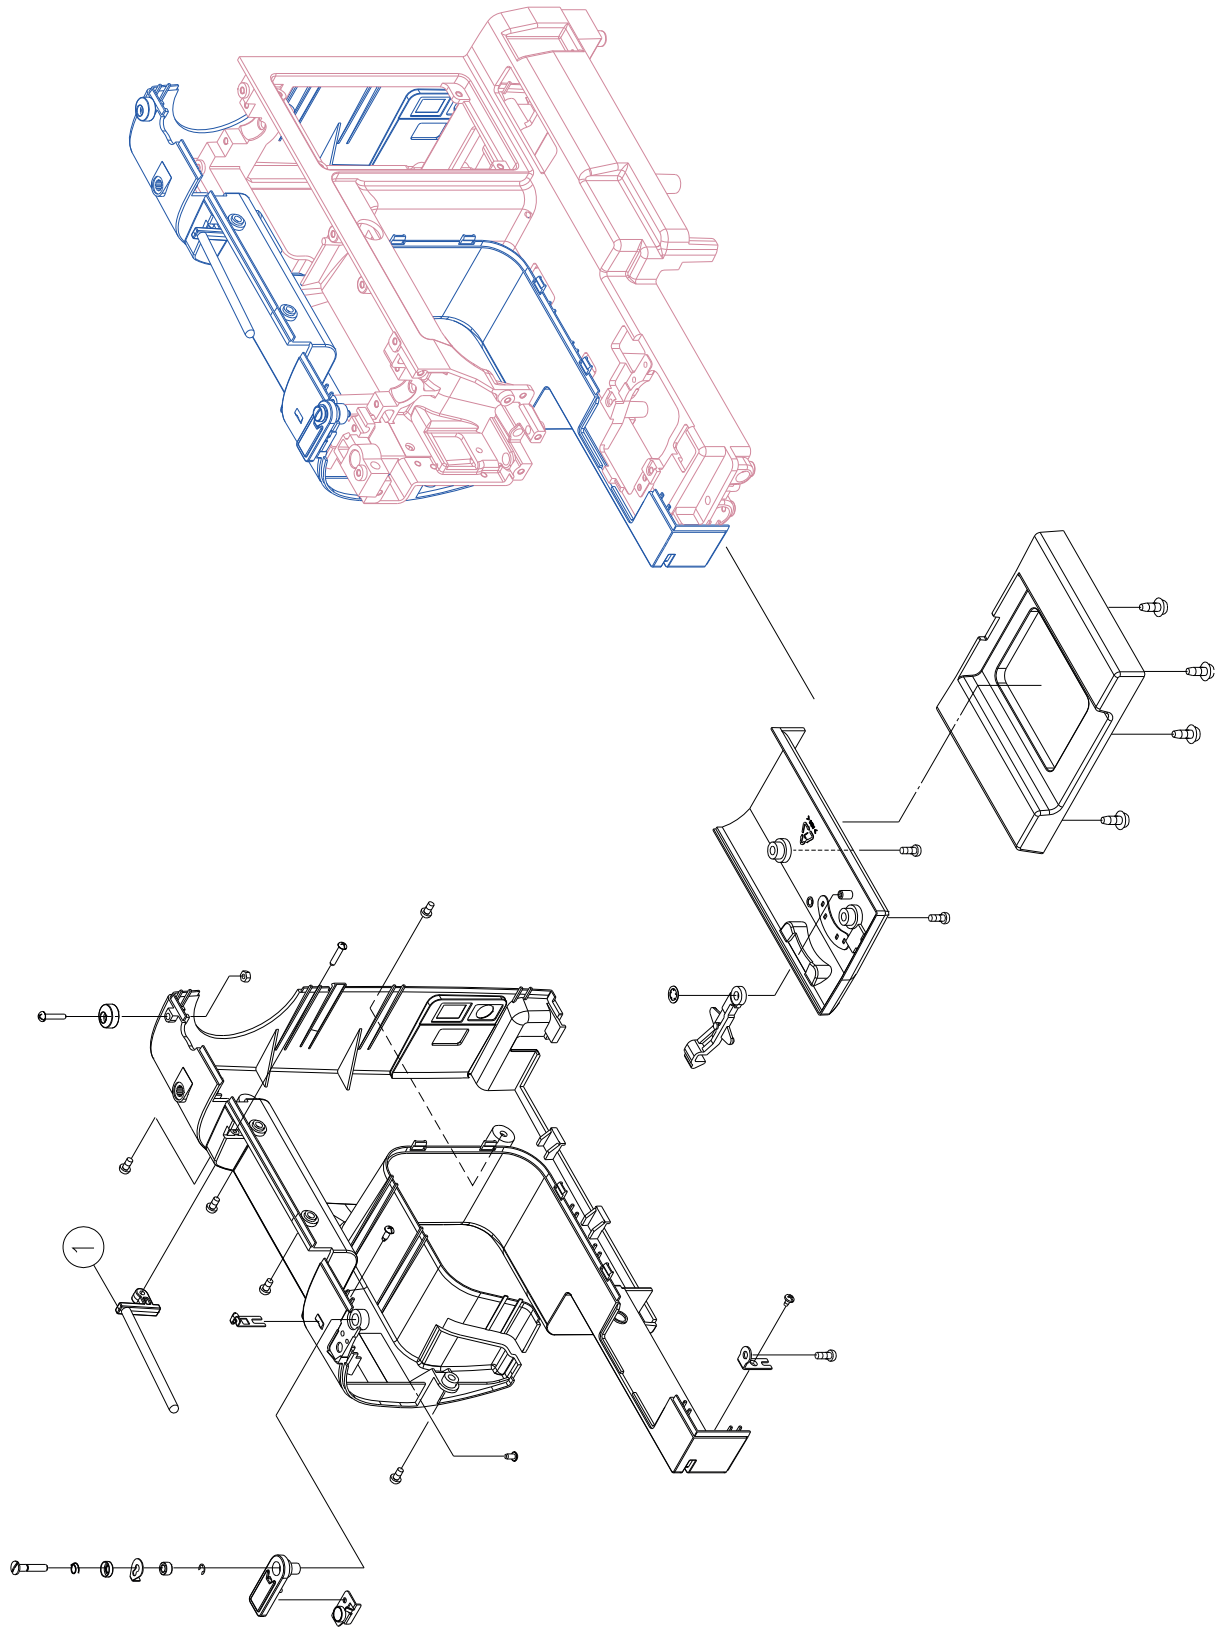

Pos Part No. Description


1 416169401 Spool rod

G

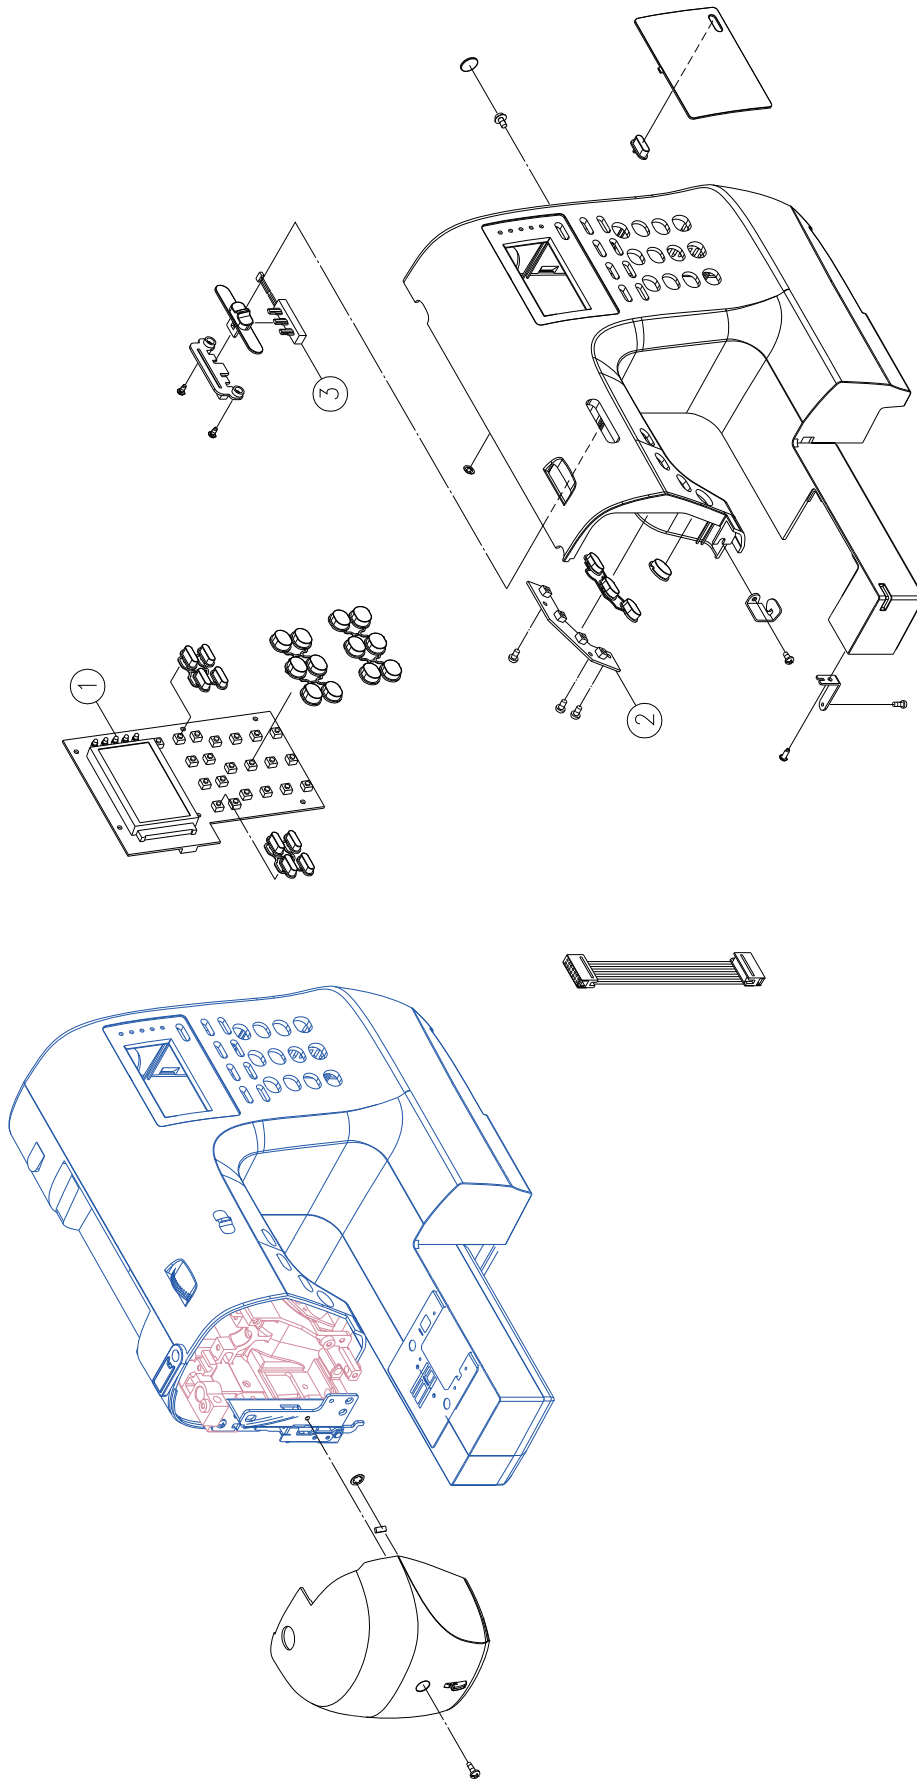

Pos	Part No.	Description
1	416595901	LCD key plate
2	270 008H5A0010	Key plate
3	270 008P2C0009	Slide volume

H

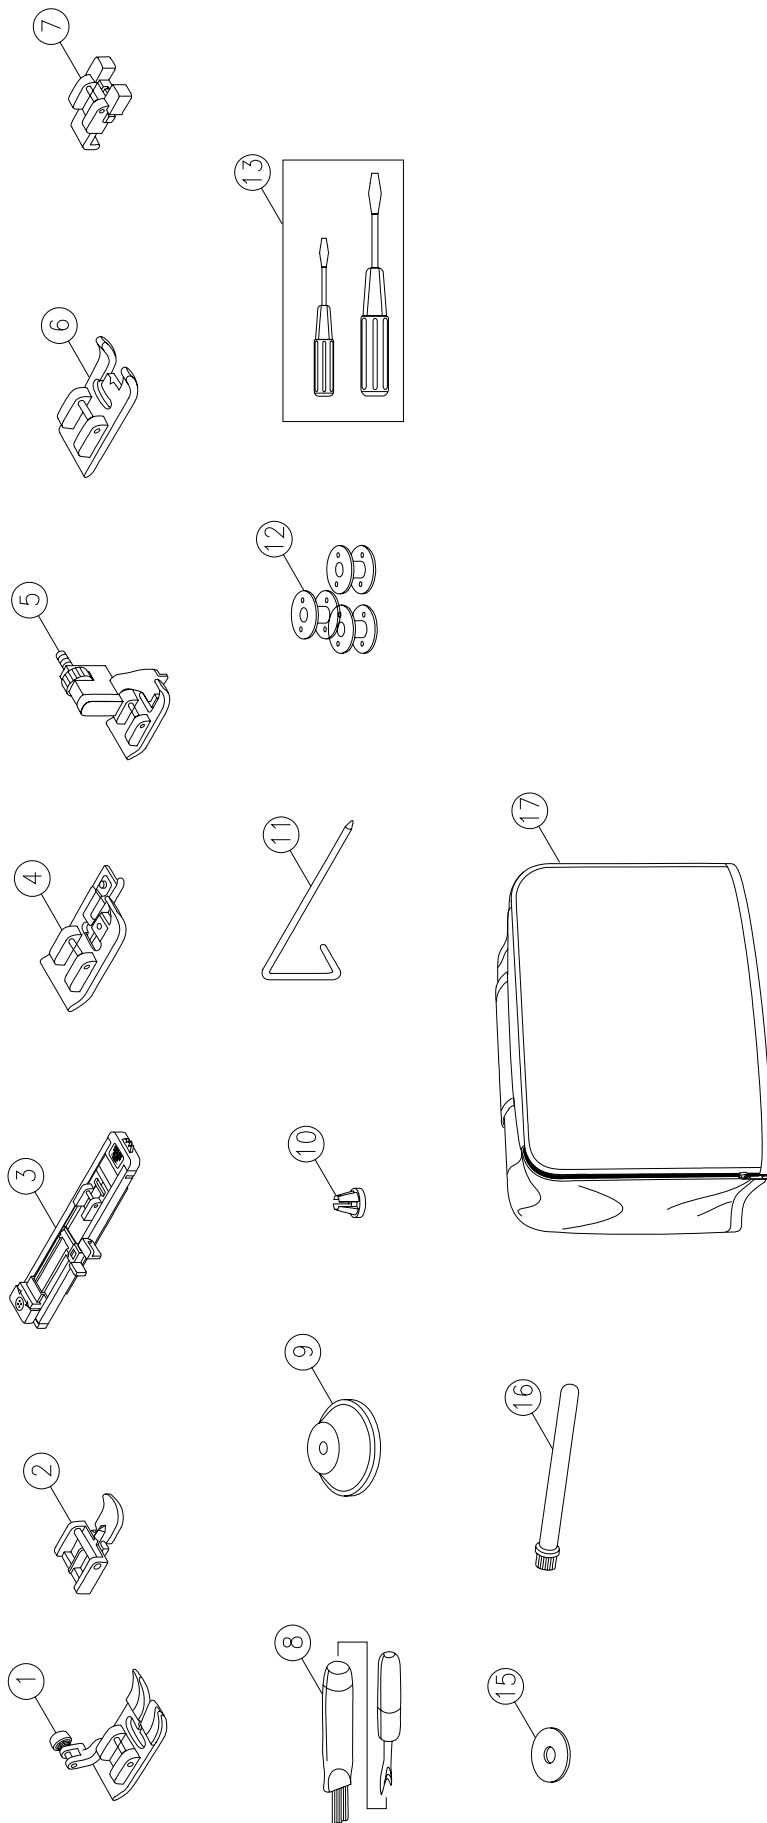

Pos	Part No.	Description
1	270 006186008	All purpose foot
2	416128701	Zipper foot (I)
3	270 006H1A0004	Buttonhole foot
4	270 006907008	Overcastting foot (E)
5	416437101	Blind hem foot (F)
6	270 006172008	Satin stitch foot (A)
7	416284501	Button sewing foot
8	416127701	Brush & seam ripper
9	416157101	Spool holder (Large)
10	416157601	Spool holder (Small)
11	416127101	Quilting guide
12	68000175	Bobbin
13	270 006012008	Screwdriver (L & S)
15	416127301	Spool pin felt
16	416157501	Auxiliary spool pin
17	270 020L008000	Sewing machine dust cover