

SINGER
5017/5028/5040/CP17 Supplement

PART LIST SUPPLEMENT

For 5017, 5028, 5040 and CP17 Models

REF.	PART NBR.	PAGE NBR.	DESCRIPTION	5 0 1 7	5 0 2 8	5 0 4 0	C P 1 7
04	356990-023	07/08	ARM TOP COVER COMPLETE	X			
04	356990-024	07/08	ARM TOP COVER COMPLETE		X		
04	356990-032	07/08	ARM TOP COVER COMPLETE			X	
04	356990-034	07/08	ARM TOP COVER COMPLETE				X
02	356953-032	09/10/12	END COVER	X			
02	356953-033	09/10/12	END COVER		X		
02	356953-072	09/10/12	END COVER			X	
02	356953-080	09/10/12	END COVER				X
08	357012-452	37/38	BUTTONHOLER & FEED REGULATOR COMPLETE	X			X
09	357013-452	37/38	BUTTONHOLER & FEED REGULATOR ASSEMBLY	X			X
08	357010-453	37/38	BUTTONHOLER & FEED REGULATOR COMPLETE		X	X	
09	357011-453	37/38	BUTTONHOLER & FEED REGULATOR ASSEMBLY		X	X	
13	356653-456	37/38	REVERSE BUTTON	X	X	X	X

*
 THIS SUPPLEMENT IS TO BE CONSIDERED IN CONJUNCTION WITH
 COMPLETE PARTS LIST (P/N 357024-001) FOR 9800 SERIES.

by
SINGER