


SINGER
629E1/629E6/629E7

List of Parts—Machines Nos. 629E1, 629E6 and 629E7

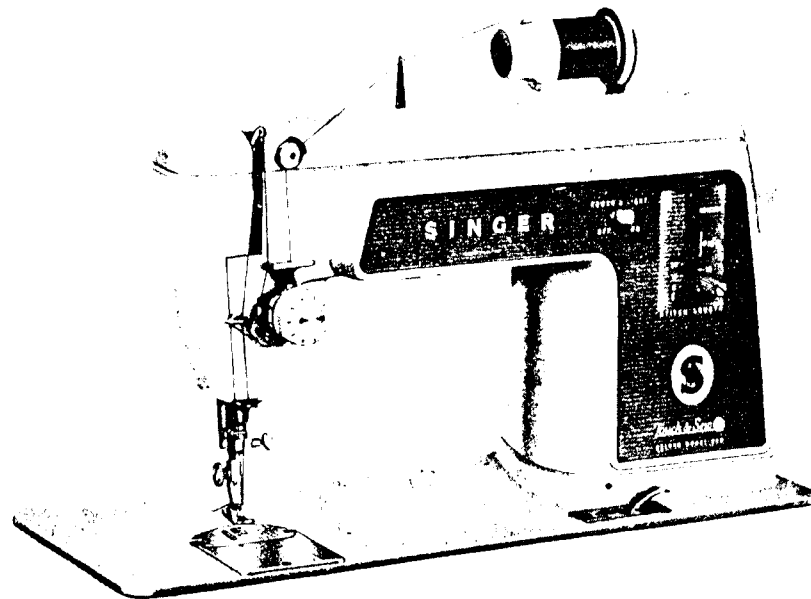


ATTACHMENT SET 161870

21906	Loop Retainer Disc
21915	Throat Plate
81200	Binder
161133	Tube of Oil
161166	Zipper Foot
161172	Seam Guide
161195	Hemmer Foot
161276	Lint Brush
161883	Attachment Box
163131	Bobbin (2)
163455	Thread Guide
2020(15x1)	Needles 11 (3) 14 (3)



List of Parts—Machines Nos. 629E1, 629E6 and 629E7


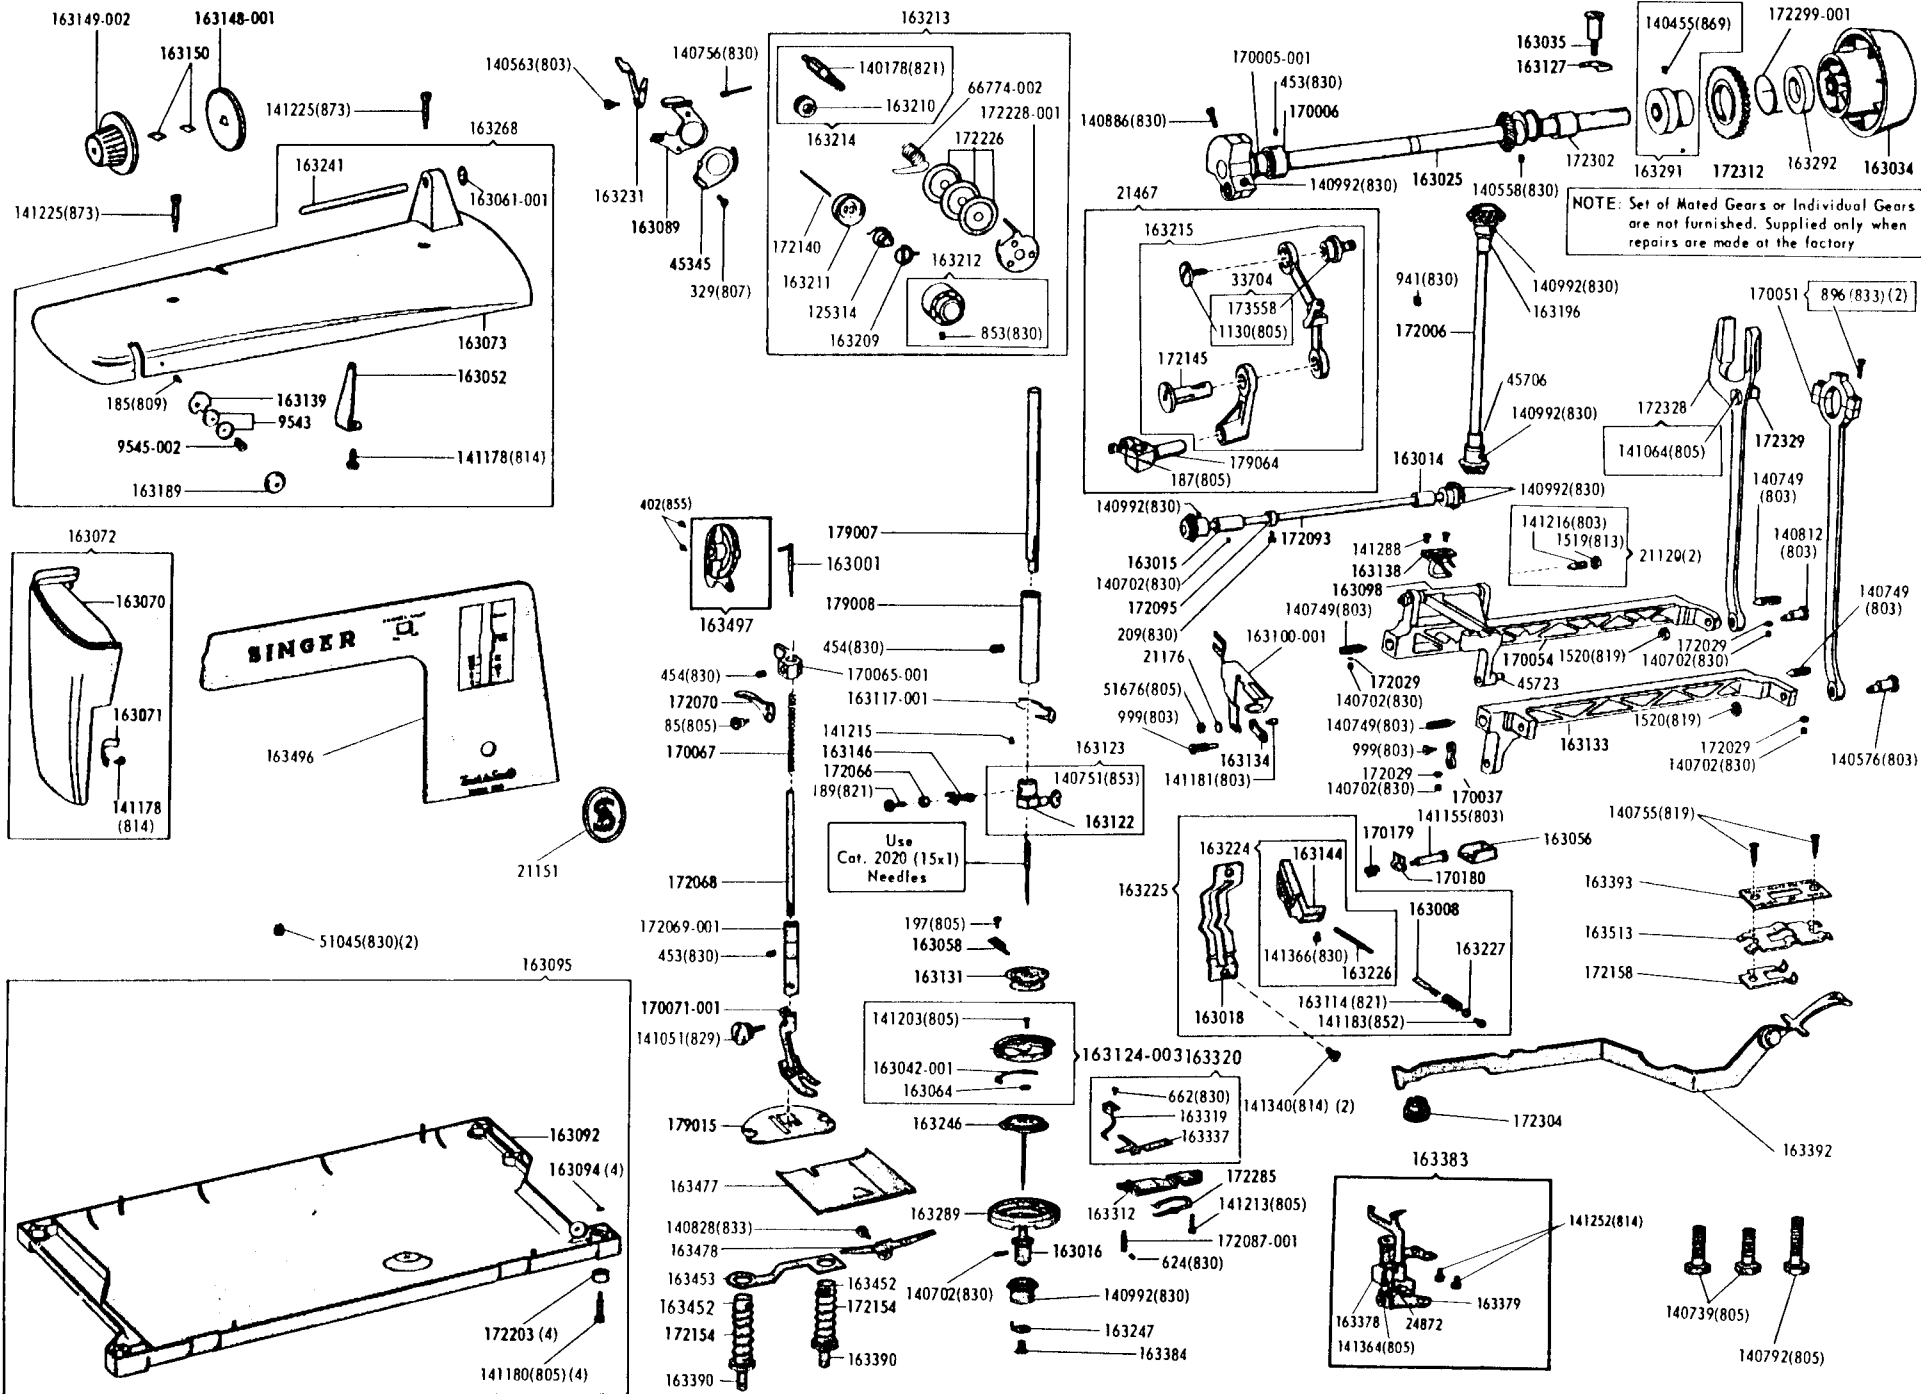


SUPPLEMENT TO PARTS CHARTS

For Classes 620, 625, 626, 628 and 629 Machines

The following new push button bobbin winder parts have been assembled into the above machines, replacing those assembled into earlier production models:

PART NO.	DESCRIPTION
141739(869)	Rotating Hook Bobbin Winder Actuating Lever Shaft Cam Set Screw
163786(656)	Rotating Hook Bobbin Winder Actuating Lever Shaft with Lever
163788	Rotating Hook Bobbin Winder Actuating Lever Shaft Cam with 141730(830)
163791	Rotating Hook Bobbin Winder Actuating Lever Shaft Cam Follower Spring
163793	Rotating Hook Bobbin Winder Lifting Bracket with Follower
163800	Bed Slide

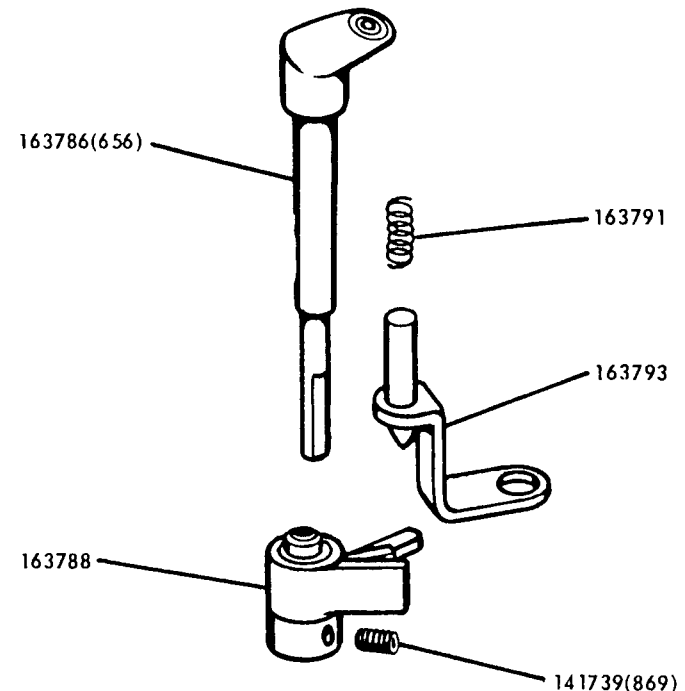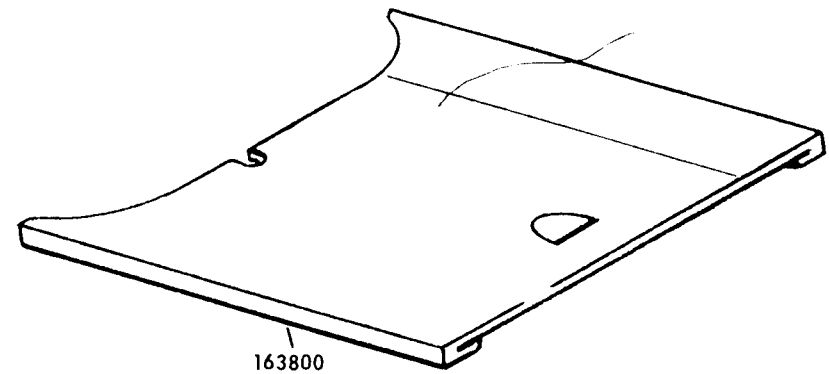

Electrical Parts—Machines Nos. 629E1, 629E6 and 629E7

