


SINGER
DSX

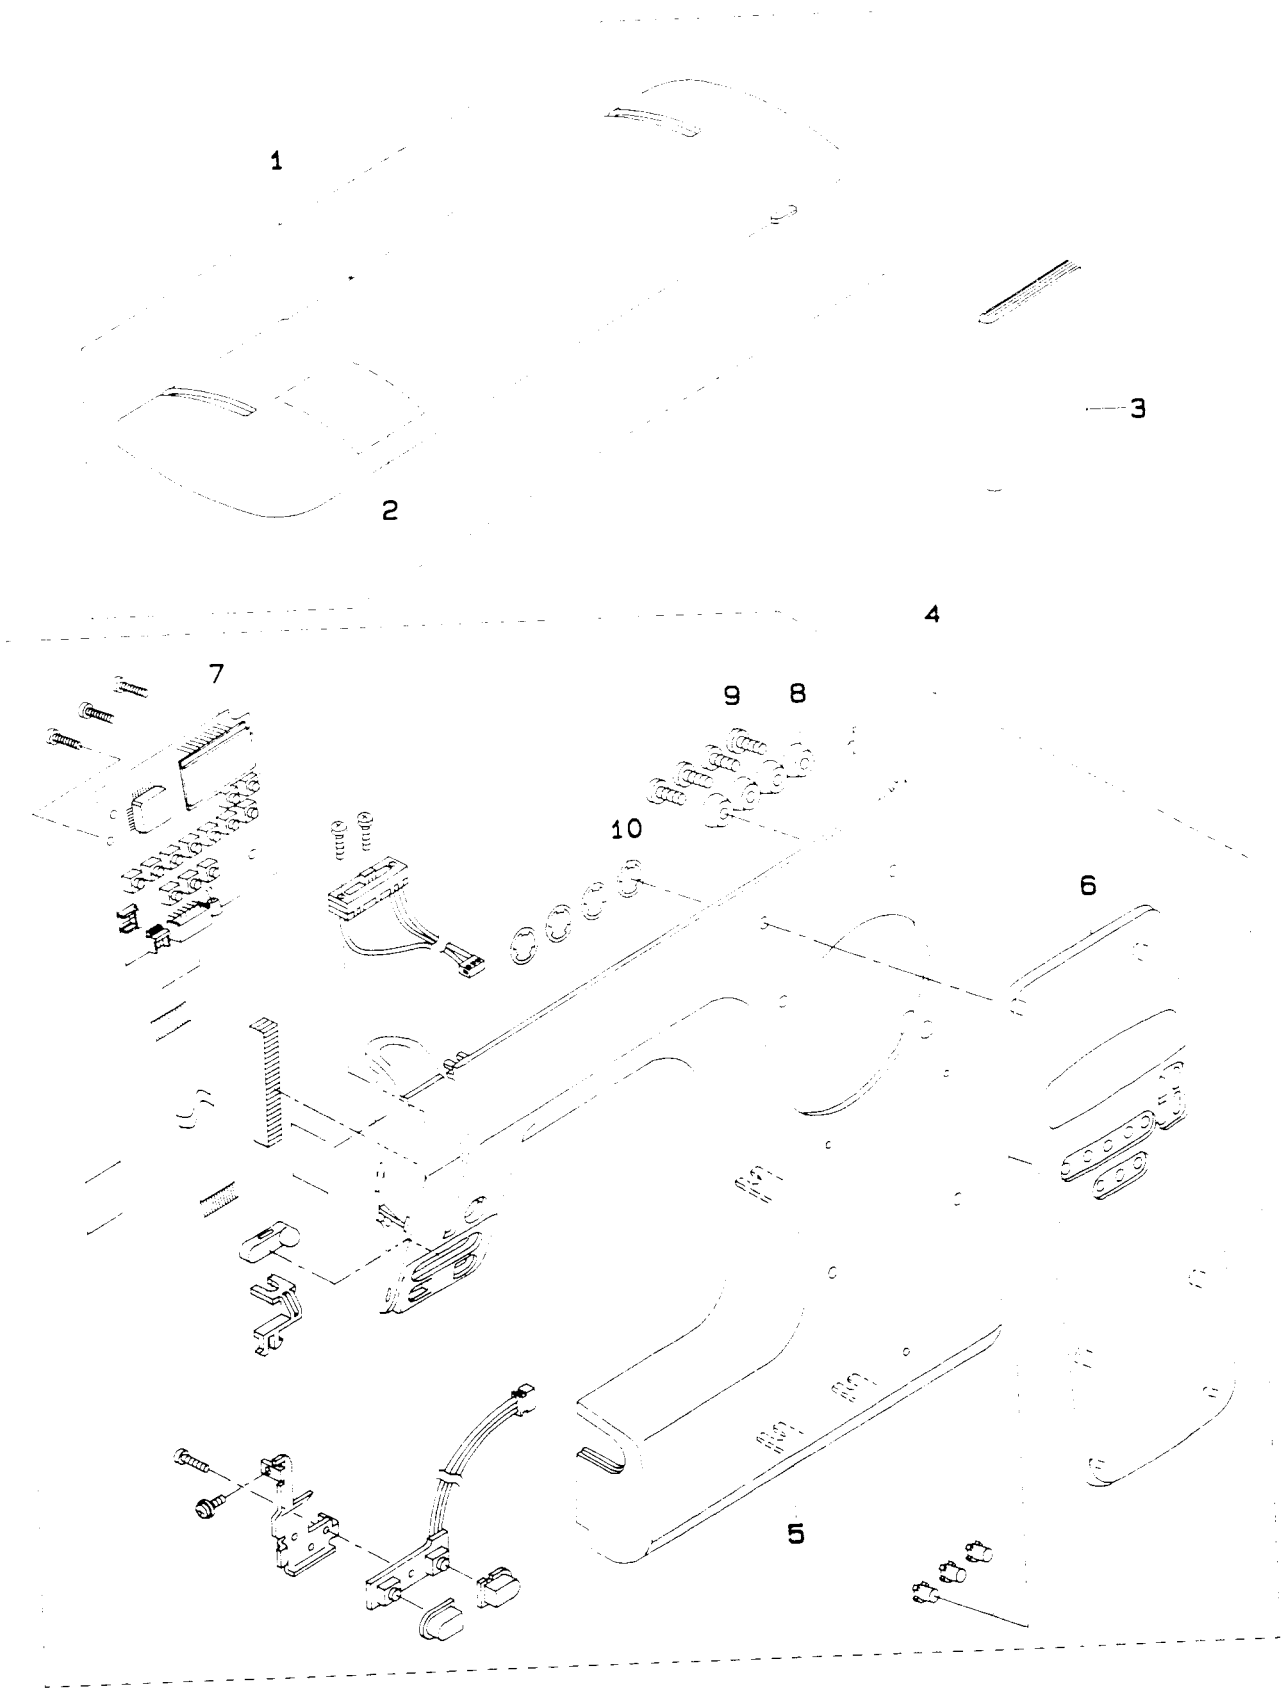

Ref No.	Note	Part No.	Part Description	Qty
1		385367	Upper cover (asm.)	1
2		385368	Thread winding label	(1)
3		385363	Instruction manual	1
4		385369	Front panel (asm.)	1
5		385370	Front panel	(1)
6		385371	Pattern display panel (asm.)	(1)
7		385372	Indicator circuit board (asm.)	(4)
8		385373	Collar	(4)
9		283522	Screw	(4)
10		283334	Push nut	

★ REFER TO THE LE/SX PARTS LIST FOR PARTS NOT INCLUDED IN THIS LIST.