




**SINGER®**


**H74**

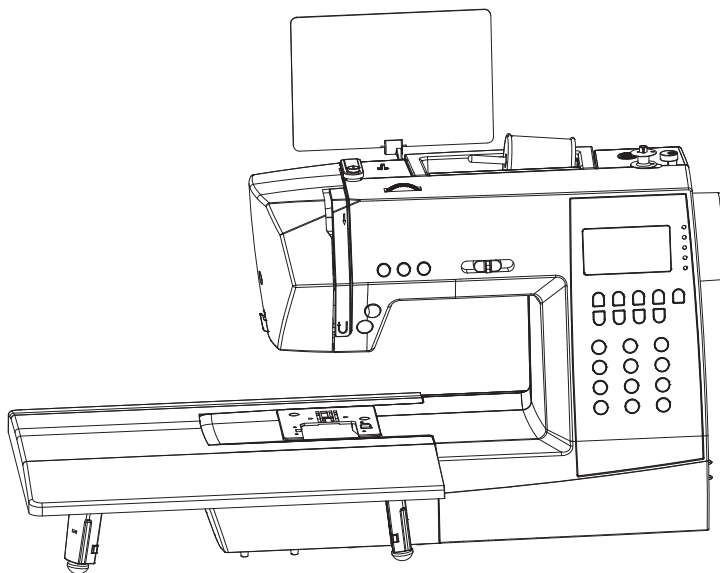

**Liste de pièces  
Lista de Piezas  
Parts List**

® A registered trademark of The Singer Company Ltd. or its affiliates.  
® *Una marca registrada de The Singer Company Ltd. o sus afiliados.*  
® *Une marca déposée de The Singer Company Ltd. ou ses filiales.*


A

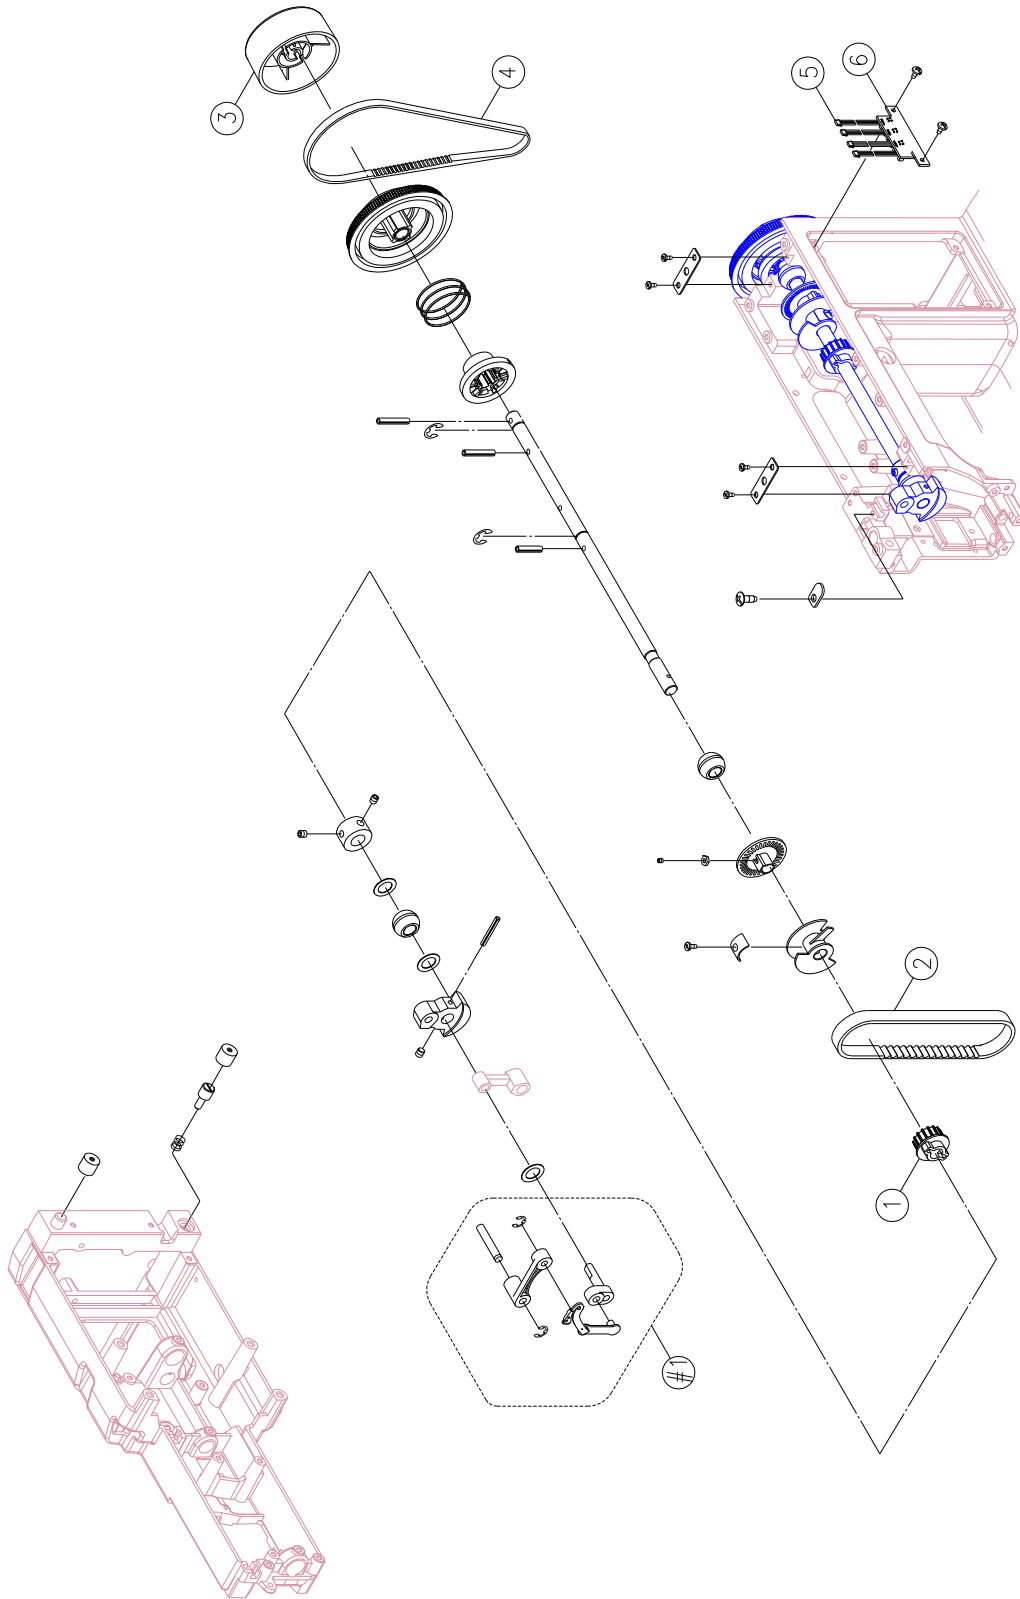

---

<u>Pos</u>	<u>Part No</u>	<u>Description</u>
1	270 H1A0403000	ARM SHAFT SPROCKET
2	270 00742505M6	MOTOR DRIVE BELT
3	416498001	HAND WHEEL
4	270 00749402M5	MOTOR DRIVE BELT(2M)
5	416566701	PHOTO SENSOR THREAD
6	416566601	PHOTO SENSOR PLATE
#1	416484501	THREAD TAKE UP LEVER COMPLETE



# B

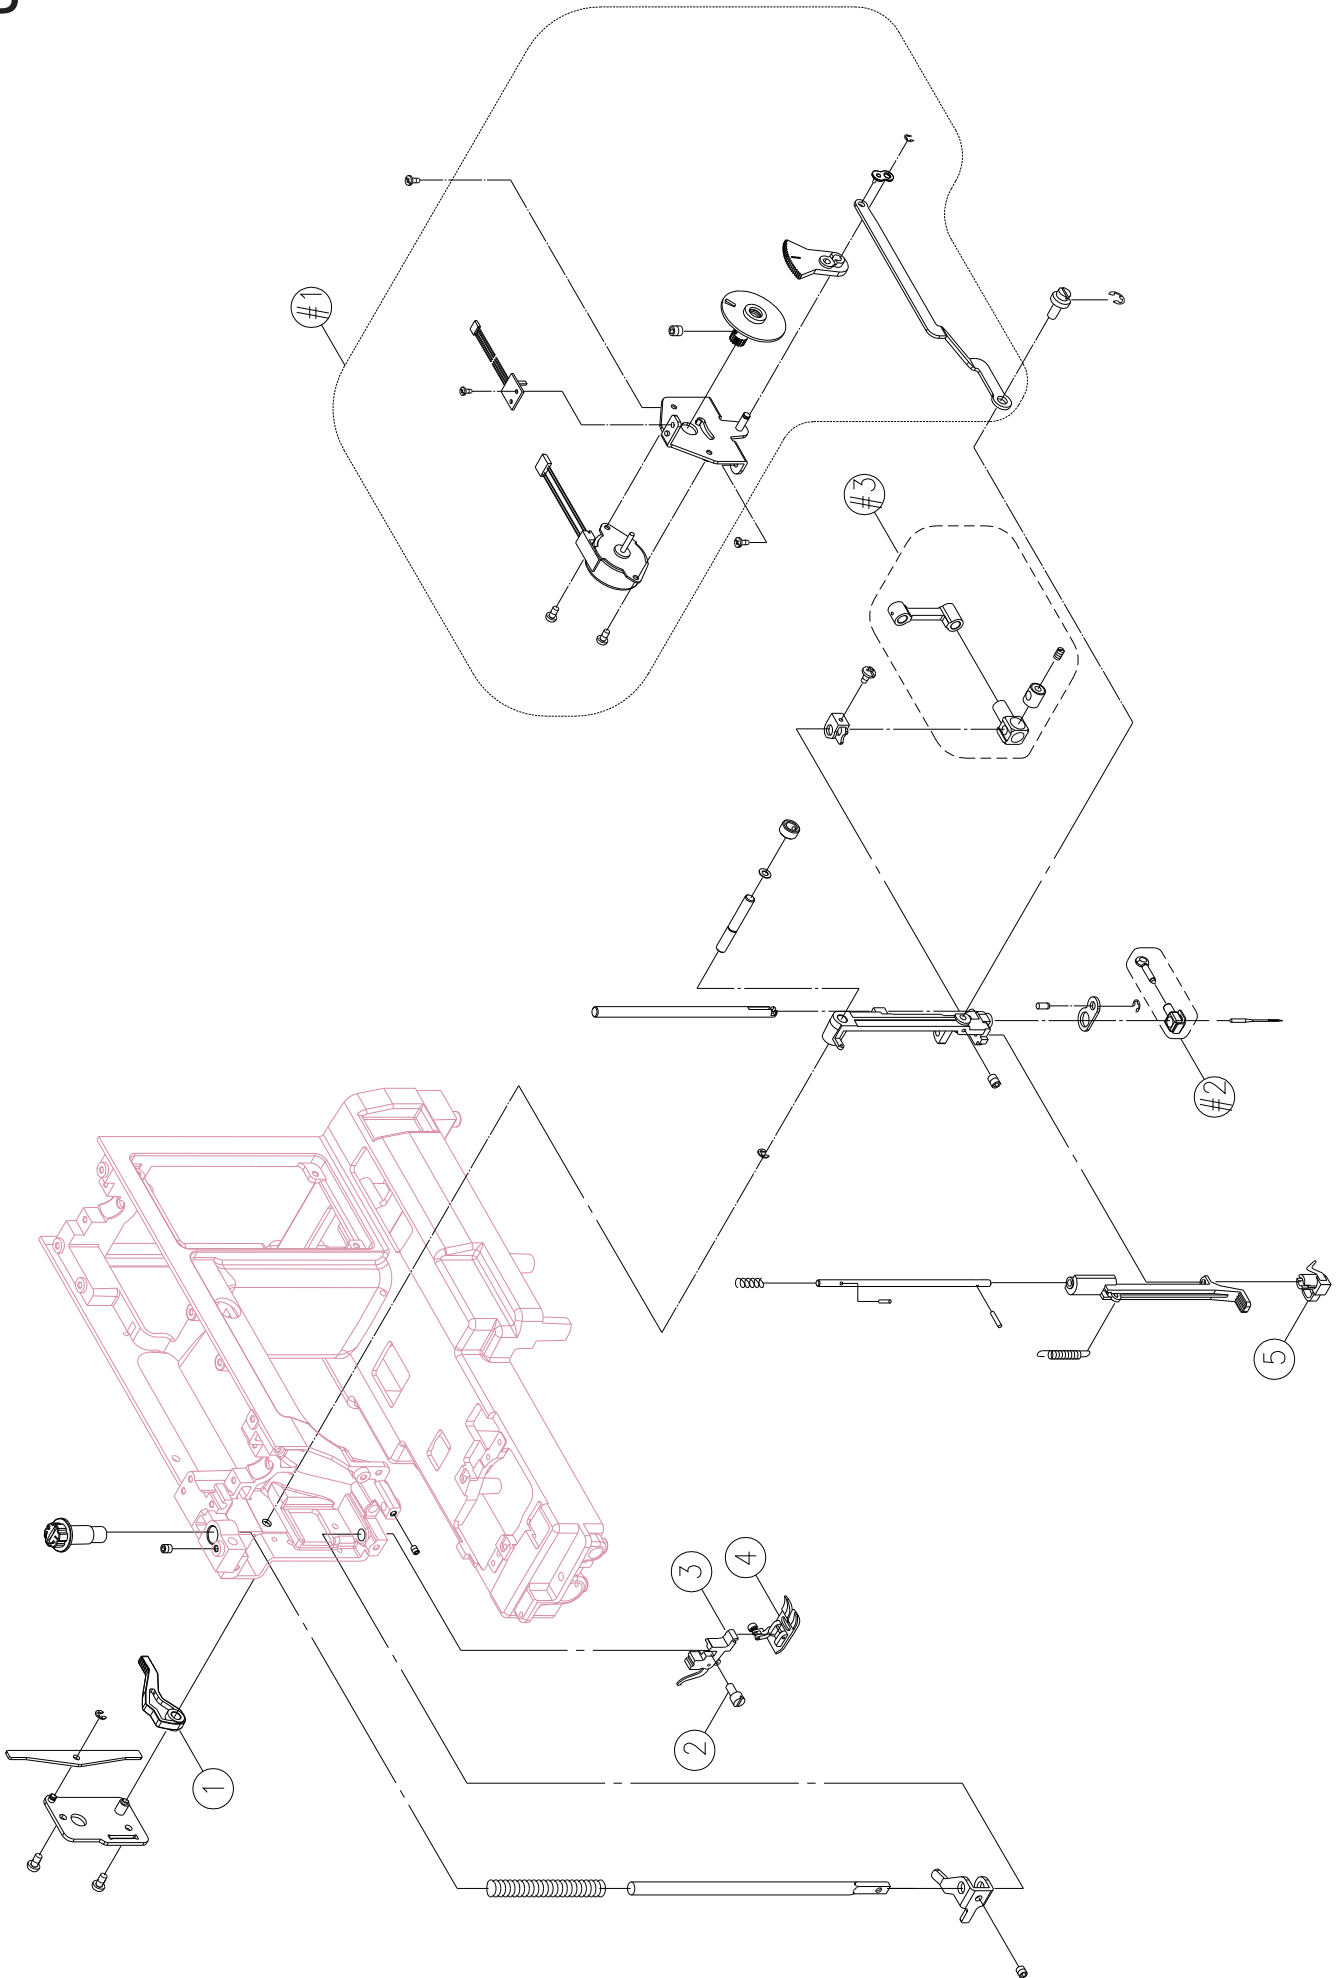

---


<u>Pos</u>	<u>Part No</u>	<u>Description</u>
1	270 H1A0073000	PRESSER BAR LIFTER LEVER
2	416184201	SET SCREW (9/64×40×7.5)
3	416128201	SHANK COMPLETE
4	270 006186008	ZIGZAG PRESSER FOOT
5	416145801	AUTO THREADER
#1	416498101	ZIGZAG PULSE MOTOR PLATE COMPLETE
#2	416245301	NEEDLE CLAMP COMPLETE
#3	416235801	NEEDLE BAR CRANK ROD COMPLETE

C

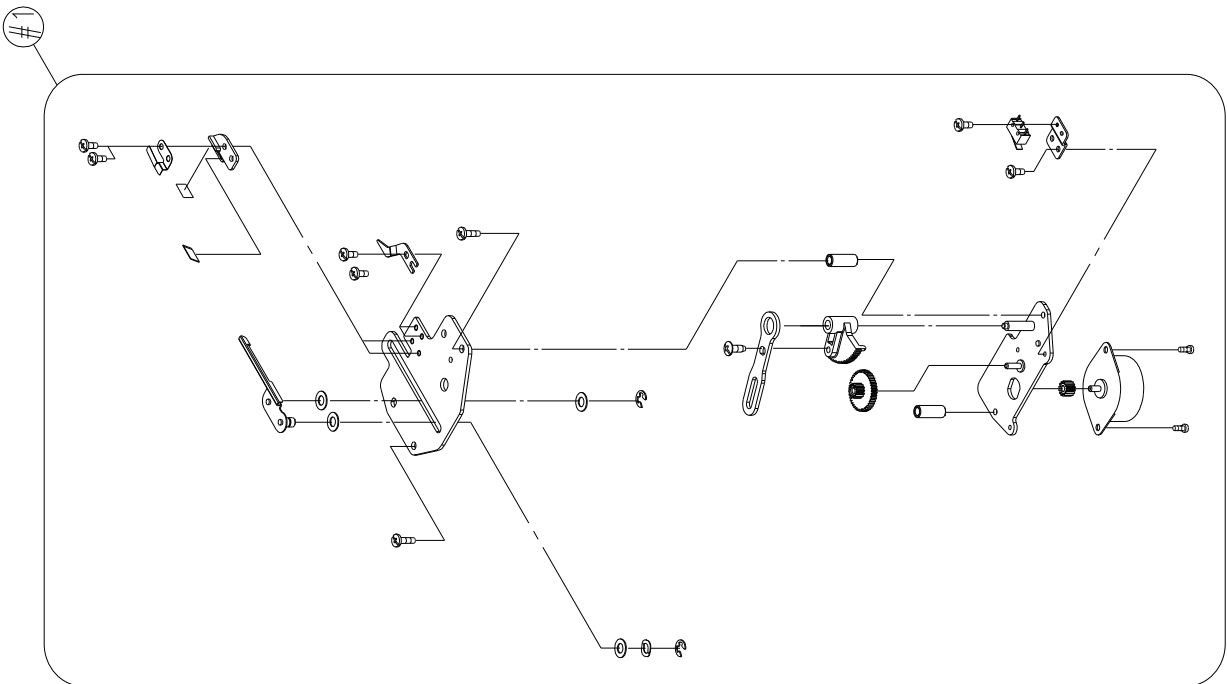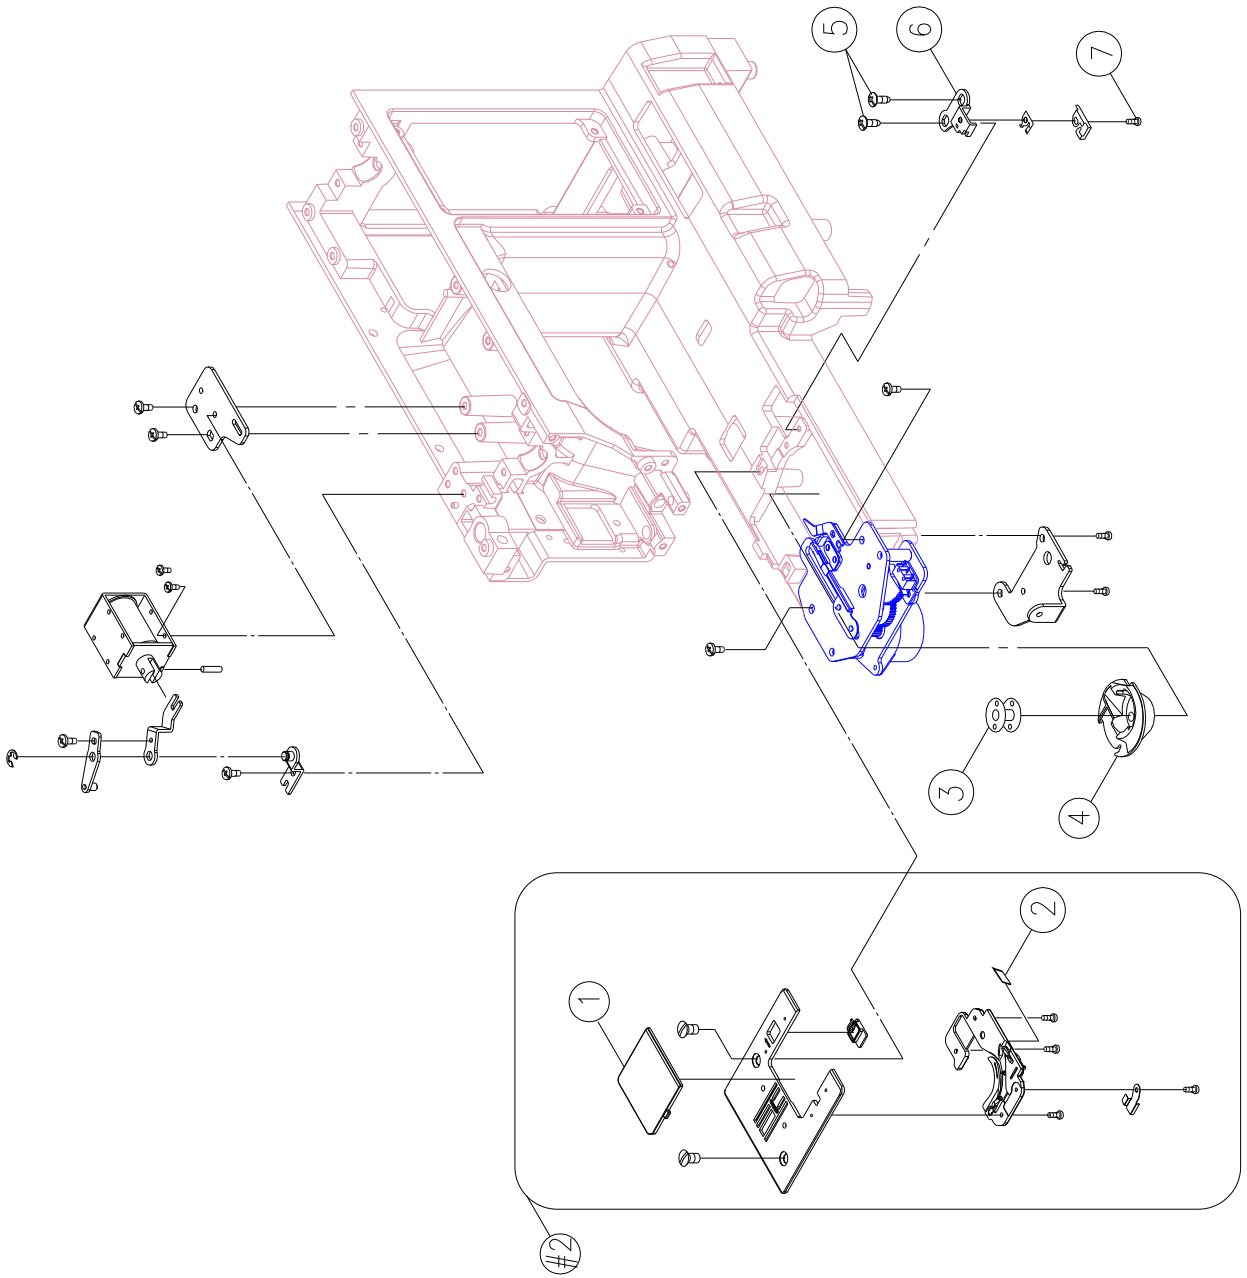

---


Pos	Part No	Description
1	270 H2A0053000	NEEDLE PLATE COVER
2	416172501	THREAD CUTTER
3	68000175	BOBBIN
4	416568801	SHUTTLE HOOK COMPLETE
5	416121201	SET SCREW (M4×6 B)
6	416143901	ROTARY HOOK PLATE
7	416119001	SET SCREW (M2×2.5)
#1	416828601	AUTO CUTTER COMPLETE
#2	416828701	NEEDLE PLATE COMPLETE

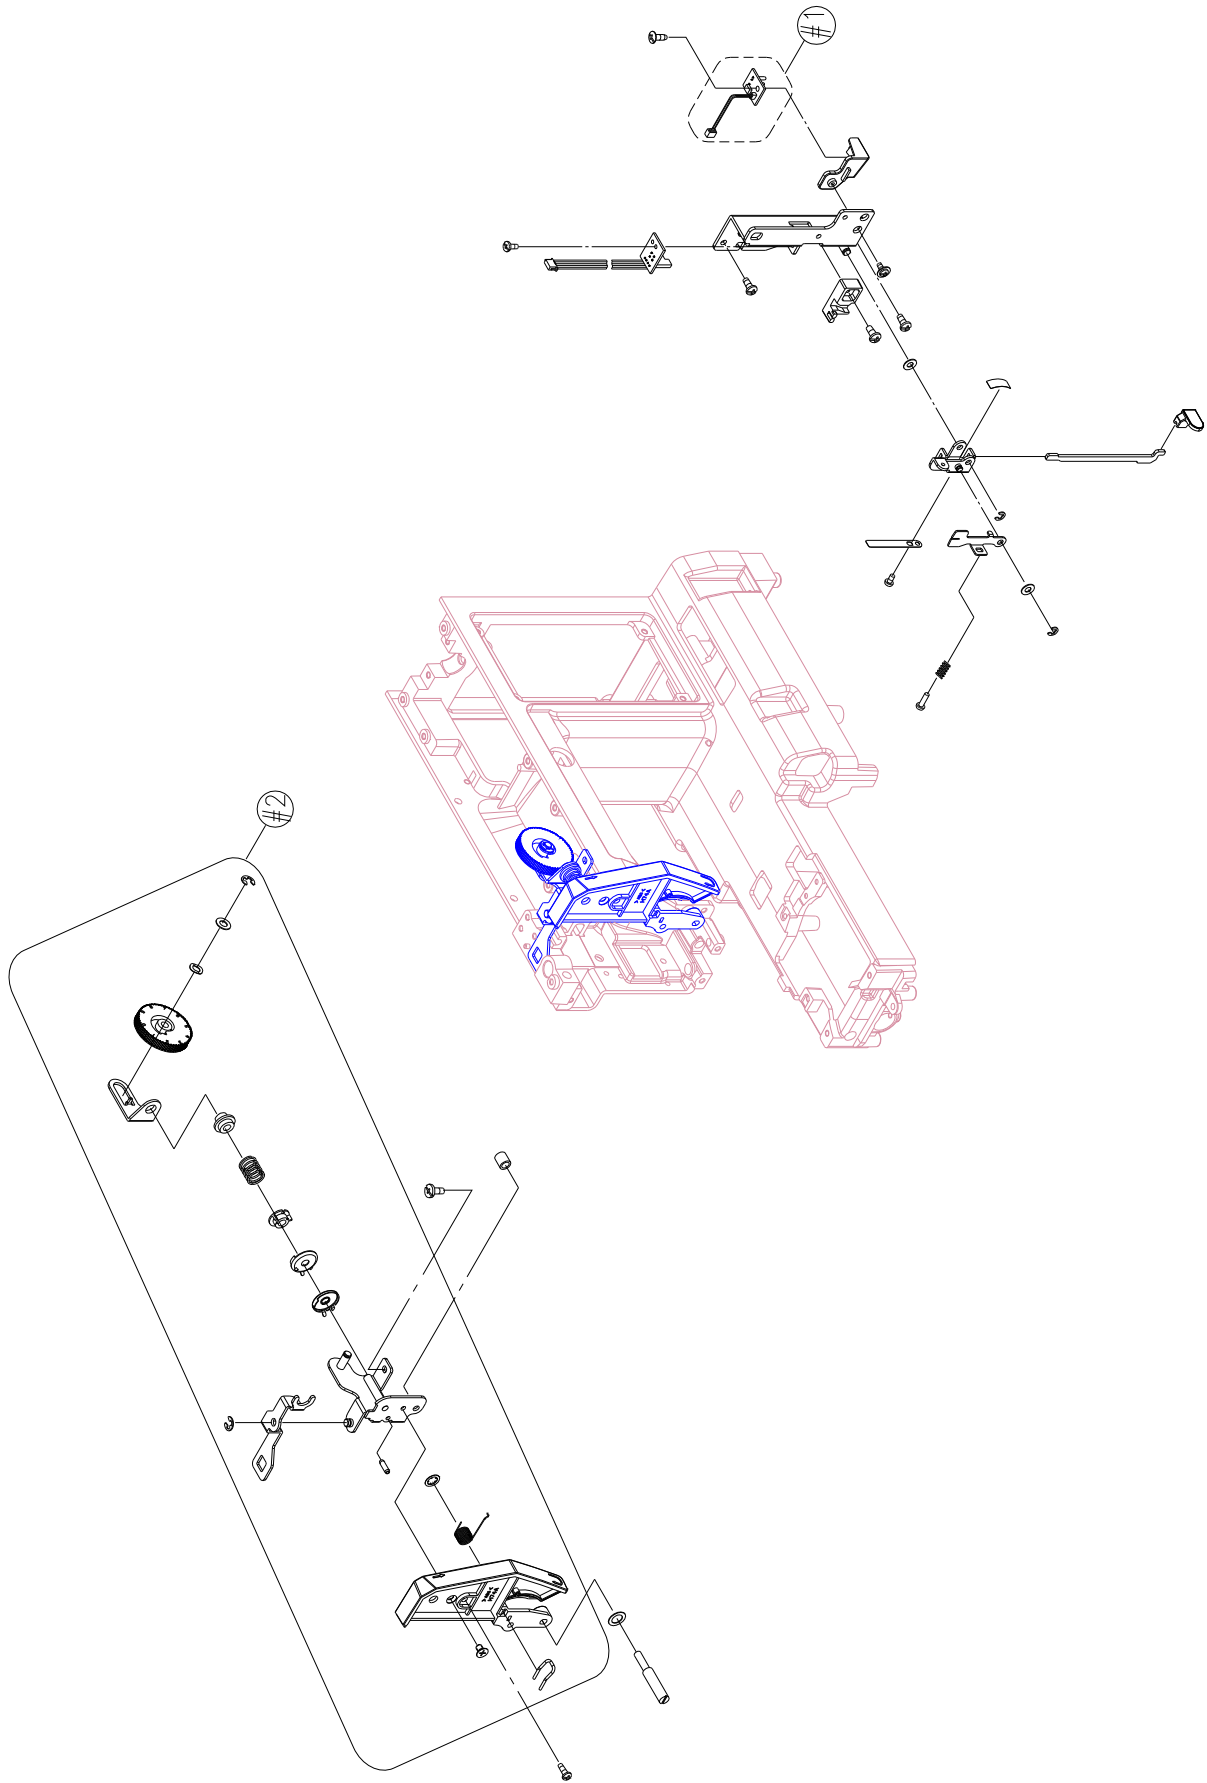



---


Pos	Part No	Description
#1	270 008H1A0017	LED LIGHT LAMP COMPLETE
#2	416828901	DIAL TENSION COMPLETE

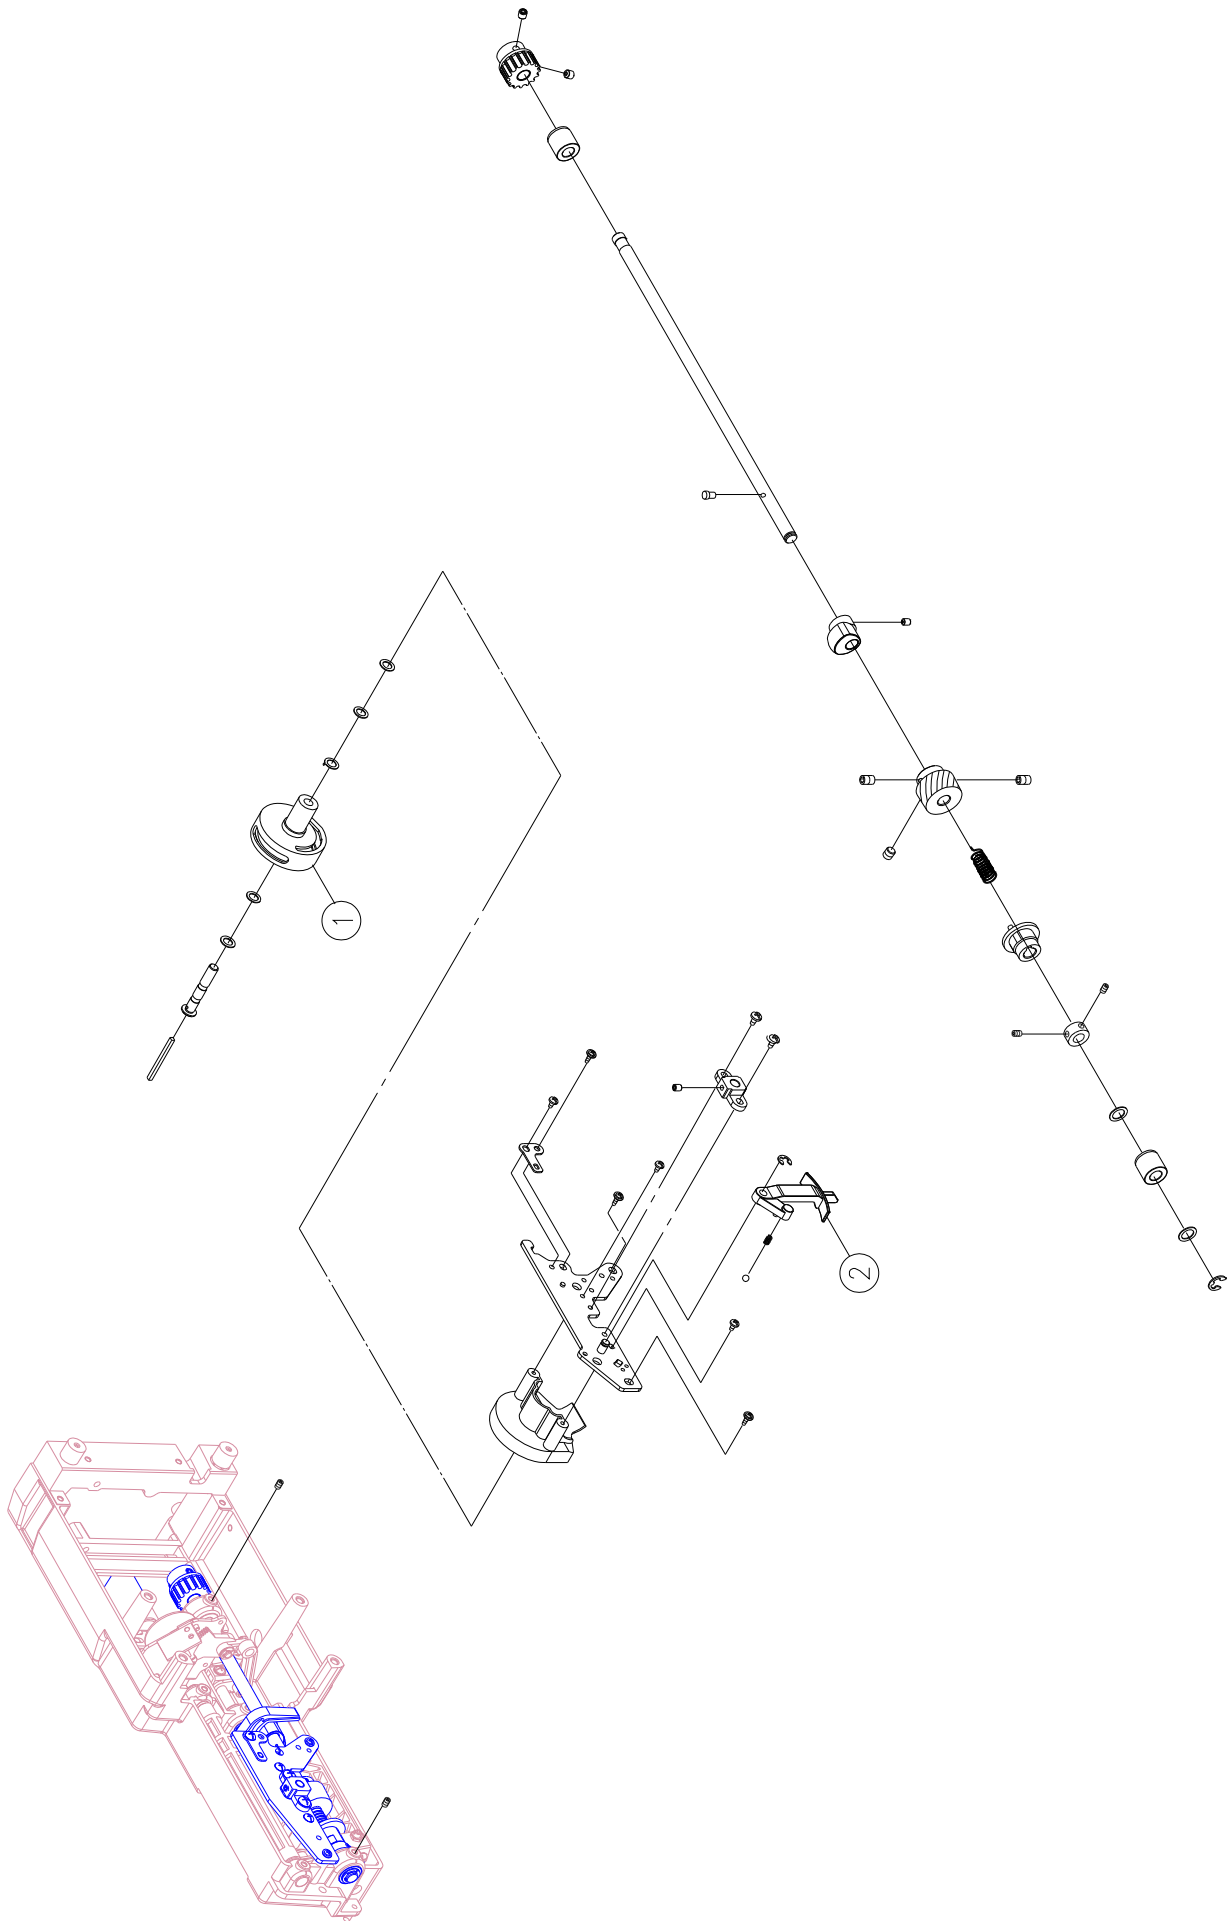

---


<u>Pos</u>	<u>Part No</u>	<u>Description</u>
1	416479801	SHUTTLE HOOK HOLDER
2	416498601	TOOTH LEVER ARM

# F

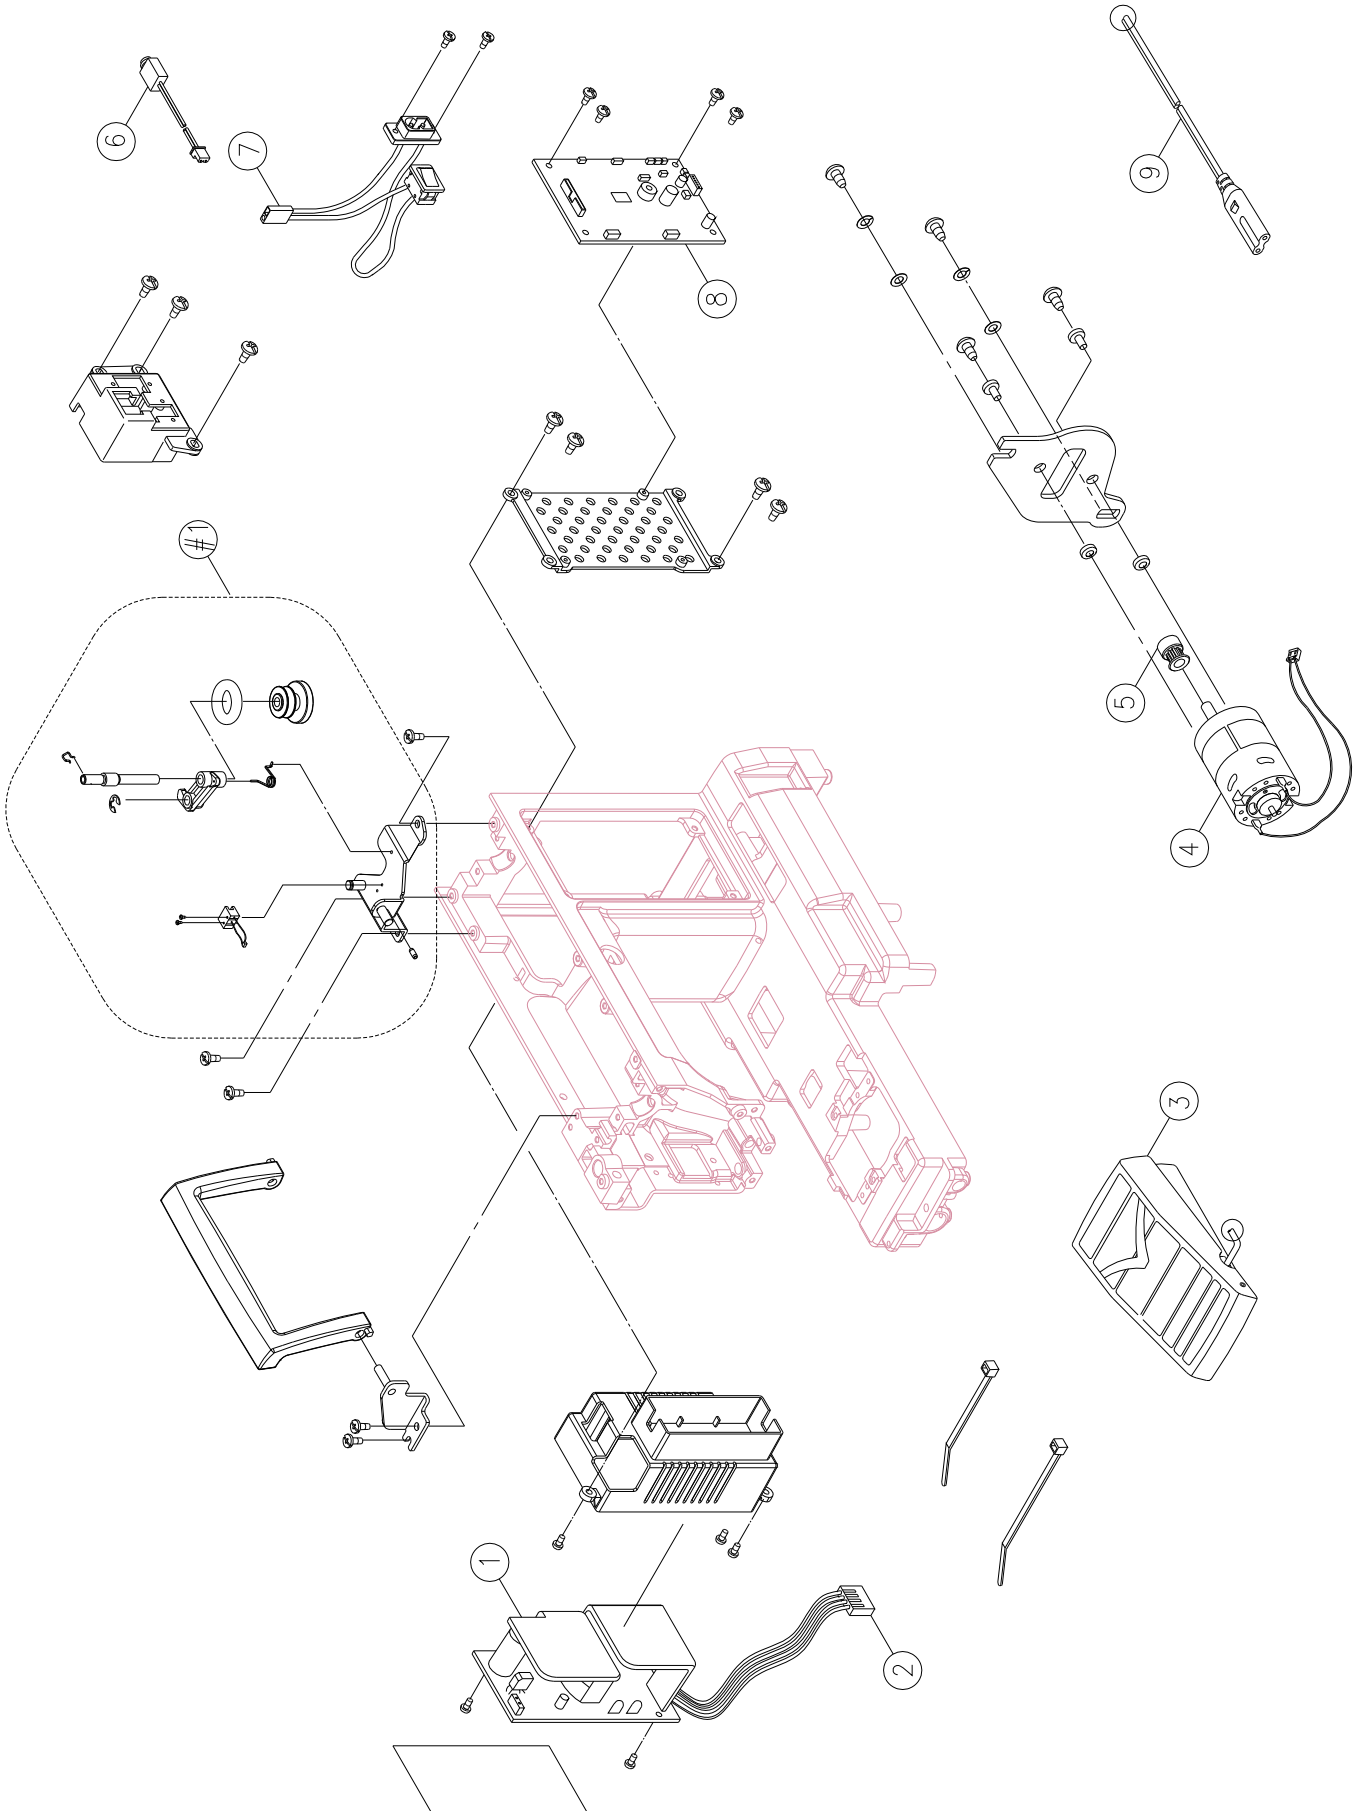


---

Pos	Part No	Description
1	416498701	HF TRANSFORMER CPL 120V
	416498801	HF TRANSFORMER CPL 230V
2	416498901	HF TRANSFORMER WIRE 120V
	416499001	HF TRANSFORMER WIRE 230V
3	416113701	FOOT CONTROLLER (C-9000)
4	416417101	MAIN MOTOR
6	416499401	CONTROLLER RECEPTACLE 120V
	416499501	CONTROLLER RECEPTACLE 230V
7	416499201	SWITCH RECEPTACLE ASS'Y 120V
	416499301	SWITCH RECEPTACLE ASS'Y 230V
8	416499101	MAIN CIRCUIT BOARD
9	412157903	POWER CORD 120V (US)
	412157801	POWER CORD 230V (EU)
	412158101	POWER CORD 240V (AU)
#1	416499601	BOBBIN WINDER COMPLETE

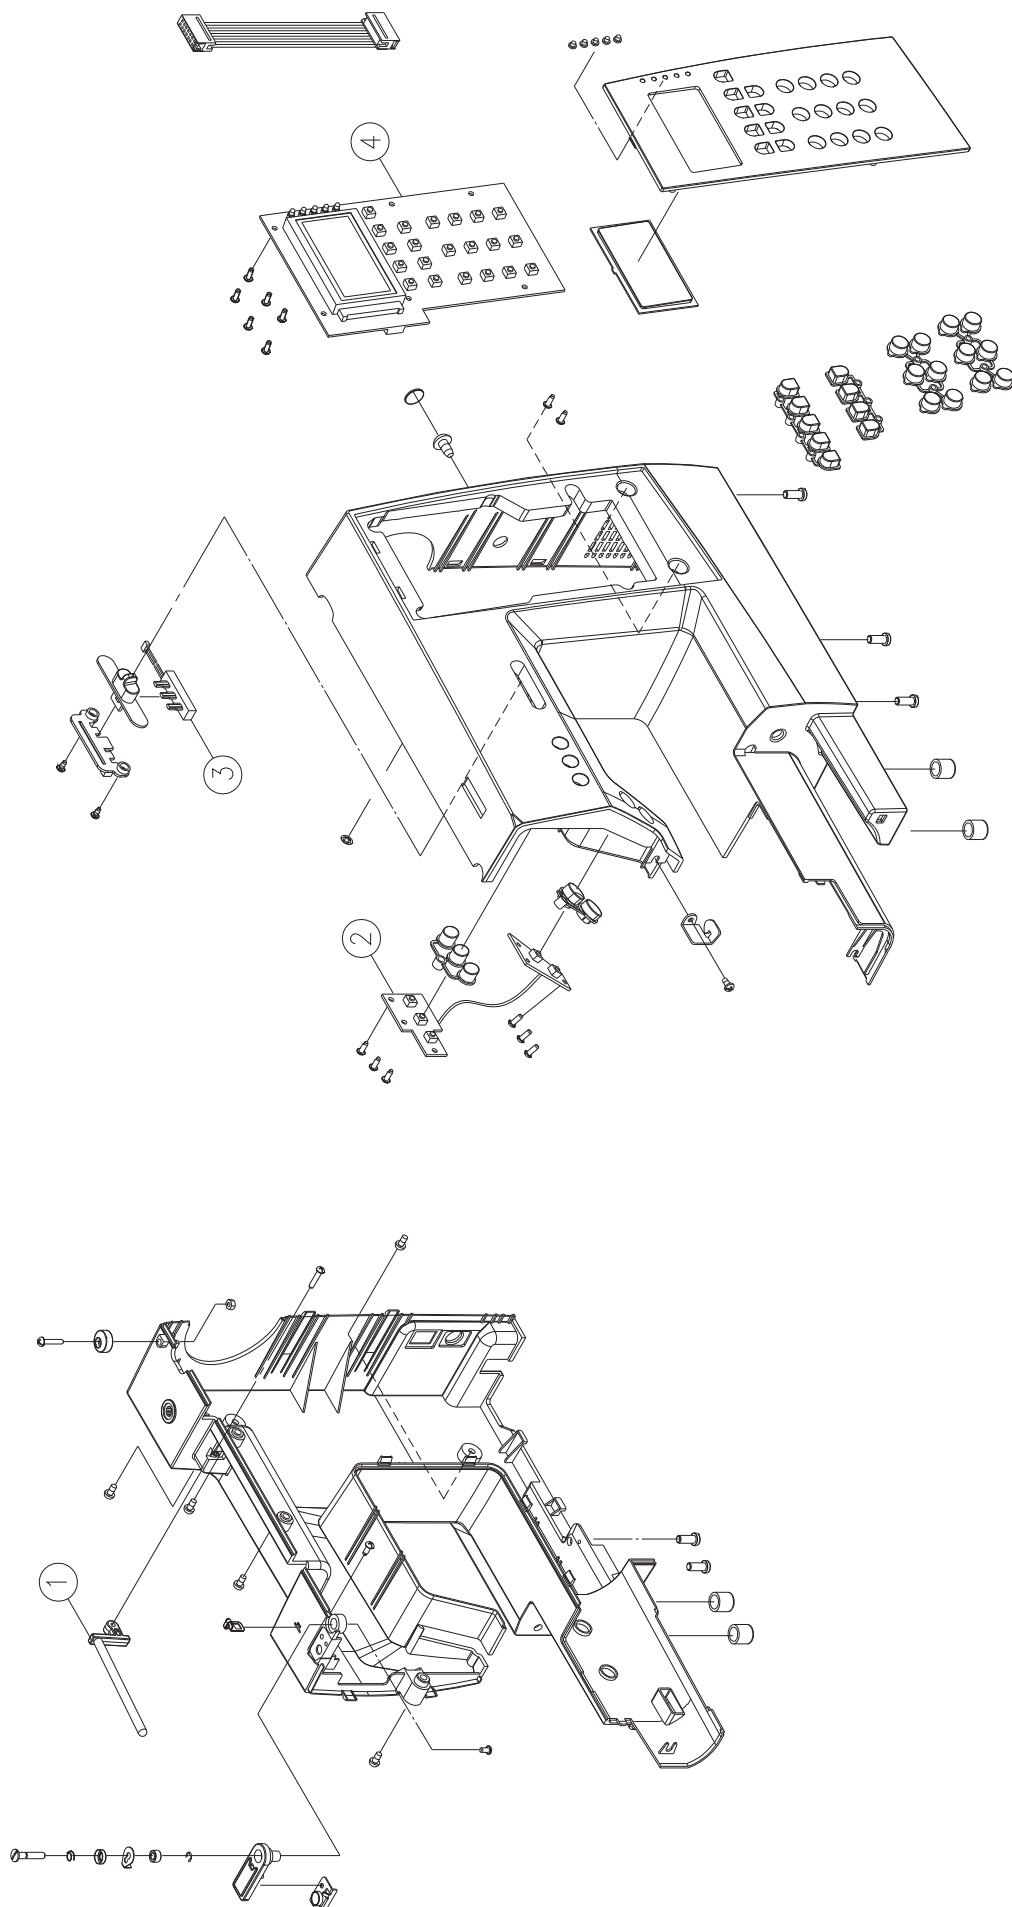

---

<u>Pos</u>	<u>Part No</u>	<u>Description</u>
1	416169401	SPOOL ROD
2	416499701	KEY PLATE H74
3	270 008P2C0009	SLIDE VOLUME
4	416499901	LCD KEY PLATE H74

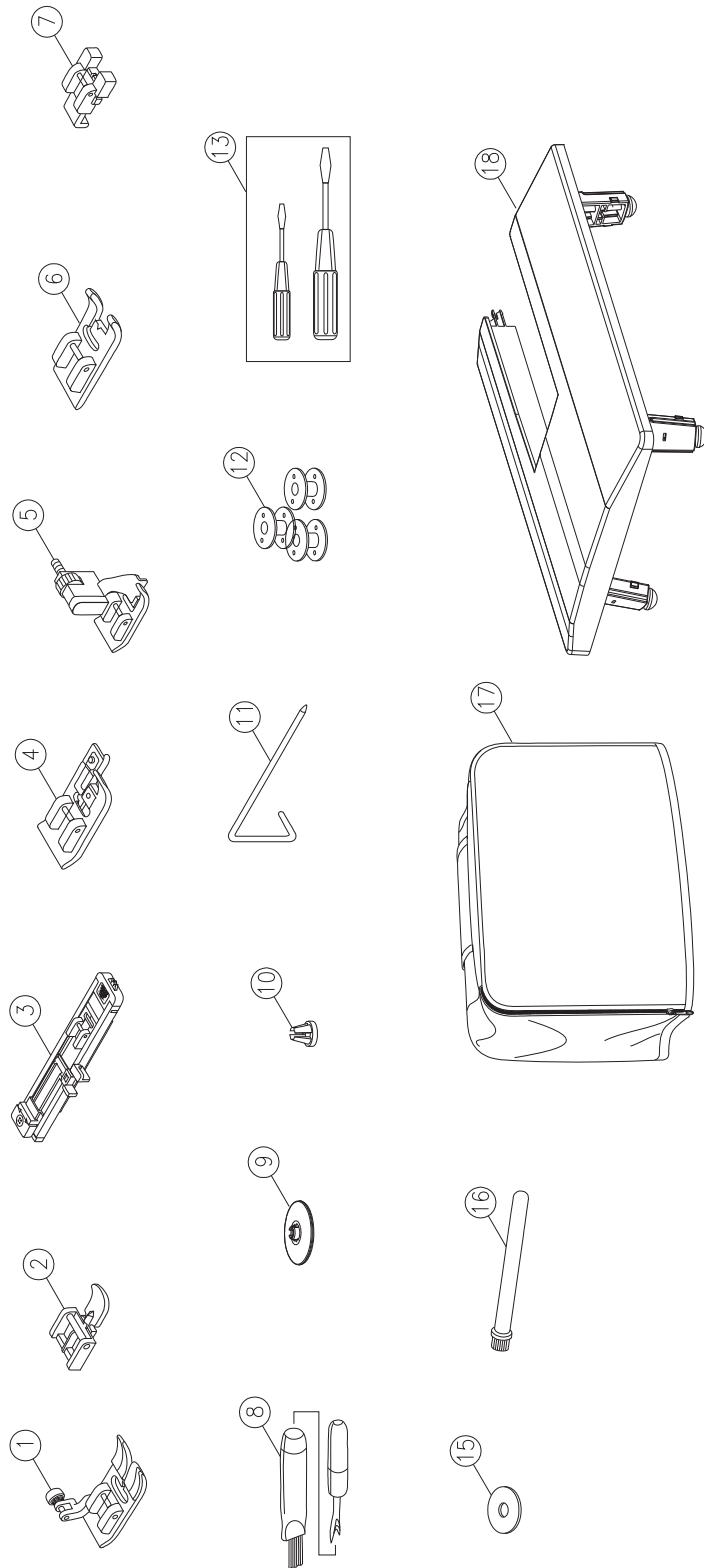



---

<u>Pos</u>	<u>Part No</u>	<u>Description</u>
1	270 006186008	ALL PURPOSE FOOT
2	416128701	ZIPPER FOOT (I)
3	270 006H1A0004	BUTTONHOLE FOOT
4	270 006907008	OVERCASTTING FOOT(E)
5	416437101	BLIND HEM FOOT (F)
6	270 006172008	SATIN STITCH FOOT(A)
7	416284501	BUTTON SEWING FOOT
8	416127701	BRUSH & SEAM RIPPER
9	416500701	SPOOL HOLDER (LARGE)
10	416500801	SPOOL HOLDER (SMALL)
11	416127101	QUILTING GUIDE
12	68000175	BOBBIN
13	270 006012008	SCREWDRIVER (L & S)
15	416127301	SPOOL PIN FELT
16	416566201	AUXILIARY SPOOL PIN
17	416574101	SEWING MACHINE DUST COVER
18	270 H1A1464209	EXTENSION TABLE